

ERX-H110KP

Intel® 6/7th Generation Core™ Processor Micro ATX
Motherboard With Intel® H110 Express Chipset

User's Manual



1st Ed – 16 October 2017

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

Copyright © 2017 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that

these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

Product Warranty

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Content

| | |
|---|-----------|
| 1. Getting Started | 8 |
| 1.1 Safety Precautions | 8 |
| 1.2 Packing List | 8 |
| 1.3 Document Amendment History | 9 |
| 1.4 Manual Objectives | 10 |
| 1.5 System Specifications | 11 |
| 1.6 Architecture Overview—Block Diagram | 14 |
| 2. Hardware Configuration | 15 |
| 2.1 Product Overview | 16 |
| 2.2 Jumper and Connector List | 17 |
| 2.3 Setting Jumpers & Connectors | 19 |
| 2.3.1 Serial port 1/2 pin9 signal select (JRI1/2) | 19 |
| 2.3.2 Serial port 3/4/5/6 pin9 signal select (JRI3/4/5/6) | 19 |
| 2.3.3 AT/ATX Power Mode Select (JATATX1) | 20 |
| 2.3.4 Clear CMOS (JCMOS1) | 20 |
| 2.3.5 ME update (For Flash BIOS use) (JME_EN1) | 21 |
| 2.3.6 General purpose I/O connector (JDIO1) | 21 |
| 2.3.7 Serial port 2 connector (JCOM2A) | 22 |
| 2.3.8 COM2 RS485/422 connector (JCOM2B) | 22 |
| 2.3.9 Serial port 3/4/5/6 connector (JCOM3/4/5/6) | 23 |
| 2.3.10 Sony/Philips Digital Interface (JSPDIF1) | 23 |
| 2.3.11 ATX Power connector (ATXPWR1) | 24 |
| 2.3.12 ATX 12V power connector (ATX12V1) | 24 |
| 2.3.13 USB 2.0 connector (JUSB4) | 25 |
| 2.3.14 Battery connector (JBAT1) | 25 |
| 2.3.15 Front Audio connector (JAUDIO1) | 26 |
| 2.3.15.1 Signal Description –Audio connector (JAUDIO1) | 26 |
| 2.3.16 LPC connector (JLPC1) | 26 |
| 2.3.17 SPI connector (JSPI1) | 27 |
| 2.3.18 Amplifier connector (JSPK1) | 27 |
| 2.3.19 Front panel setting connector (JFP1) | 28 |
| 2.3.20 CPU fan connector (CPUFAN1) | 28 |
| 2.3.21 System fan connector 1 (SYSFAN1) | 29 |
| 2.3.22 System fan connector 2 (SYSFAN3) | 29 |
| 2.3.23 PS/2 keyboard & mouse header (JKBMS1) | 30 |
| 2.3.24 SMBus connector (JSMB1) | 30 |

ERX-H110KP User's Manual

| | | |
|---------------------------|--|----|
| 2.3.25 | Auxiliary panel connector (JAUXP1) | 31 |
| 2.3.26 | PC Buzzer header (JBZ1) | 31 |
| 2.3.27 | LPT connector (JLPT1) | 32 |
| 2.3.28 | Gigabit LAN (RJ-45) connector (LAN1/2) | 32 |
| 3.BIOS Setup | 33 | |
| 3.1 | Introduction | 34 |
| 3.2 | Starting Setup | 34 |
| 3.3 | Using Setup | 35 |
| 3.4 | Getting Help | 36 |
| 3.5 | In Case of Problems | 36 |
| 3.6 | BIOS setup | 37 |
| 3.6.1 | Main Menu | 37 |
| 3.6.1.1 | System Language | 38 |
| 3.6.1.2 | System Date | 38 |
| 3.6.1.3 | System Time | 38 |
| 3.6.2 | Advanced Menu | 39 |
| 3.6.2.1 | CPU Configuration | 39 |
| 3.6.2.1.1 | CPU – Power Management Control | 40 |
| 3.6.2.2 | PCH-FW Configuration | 41 |
| 3.6.2.2.1 | Firmware Update Configuration | 42 |
| 3.6.2.3 | ACPI Settings | 42 |
| 3.6.2.4 | S5 RTC Wake Settings | 43 |
| 3.6.2.5 | Super IO Configuration | 45 |
| 3.6.2.5.1 | Serial Port 1 Configuration | 46 |
| 3.6.2.5.2 | Serial Port 2 Configuration | 47 |
| 3.6.2.5.3 | Serial Port 3 Configuration | 47 |
| 3.6.2.5.4 | Serial Port 4 Configuration | 48 |
| 3.6.2.5.5 | Serial Port 5 Configuration | 48 |
| 3.6.2.5.6 | Serial Port 6 Configuration | 49 |
| 3.6.2.5.7 | Parallel Port Configuration | 49 |
| 3.6.2.6 | NCT6106D H/W Monitor | 50 |
| 3.6.2.6.1 | Smart Fan Configuration | 50 |
| 3.6.2.7 | Serial Port Console Redirection | 51 |
| 3.6.2.7.1 | COM1 | 52 |
| 3.6.2.8 | Intel TXT Configuration | 53 |
| 3.6.2.9 | Network Stack Configuration | 54 |
| 3.6.2.10 | CSM Configuration | 55 |
| 3.6.2.11 | USB Configuration | 57 |
| 3.6.3 | Chipset | 58 |
| 3.6.3.1 | System Agent (SA) Configuration | 58 |

| | | |
|-----------|--|-----------|
| 3.6.3.1.1 | Graphics Configuration | 59 |
| 3.6.3.1.2 | DMI/OPI Configuration | 59 |
| 3.6.3.1.3 | PEG Port Configuration | 60 |
| 3.6.3.1.4 | Memory Configuration | 61 |
| 3.6.3.2 | PCH-IO Configuration | 62 |
| 3.6.3.2.1 | HD Audio Configuration | 62 |
| 3.6.3.2.2 | SATA And RST Configuration | 63 |
| 3.6.4 | Security..... | 64 |
| 3.6.4.1 | Secure Boot menu | 65 |
| 3.6.4.1.1 | Key Management..... | 65 |
| 3.6.5 | Boot | 66 |
| 3.6.6 | Save and exit..... | 67 |
| 3.6.6.1 | Save Changes and Reset..... | 67 |
| 3.6.6.2 | Discard Changes and Reset..... | 67 |
| 3.6.6.3 | Restore Defaults | 67 |
| 3.6.6.4 | Launch EFI Shell from filesystem device | 67 |
| 4. | Drivers Installation..... | 68 |
| 4.1 | Install Chipset Driver | 69 |
| 4.2 | Install VGA Driver..... | 70 |
| 4.3 | Install ME Driver | 72 |
| 4.4 | Install Audio Driver (For Realtek ALC892 HD Audio) | 73 |
| 4.5 | Install LAN Driver | 74 |
| 4.6 | Install IRST Driver | 76 |
| 5. | Mechanical Drawing | 78 |

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x ERX-H110KP motherboard
- 2 x SATA cable
- 1 x I/O Shield



If any of the above items is damaged or missing, contact your retailer.

1.3 Document Amendment History

| Revision | Date | By | Comment |
|-----------------|--------------|--------|-----------------|
| 1 st | October 2017 | Avalue | Initial Release |

1.4 Manual Objectives

This manual describes in details Avalue Technology ERX-H110KP Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to set up ERX-H110KP or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors regarding this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

1.5 System Specifications

| System | |
|---------------------------|--|
| CPU | Intel® 6/7th Generation Core™ (Skylake-S) Processor (Max. TDP at 95W) Intel® H110 Express Chipset |
| BIOS | Two 288-pin DDR4 2400MHz DIMM socket, supports up to 32GB Max |
| System Chipset | 1 x Intel® I219LM Gigabit Ethernet PHY 1 x Intel® I211AT PCI-e Gigabit Ethernet Realtek ALC892 HD Audio with 6W Amplifier |
| I/O Chip | HDMI, DP, VGA |
| System Memory | 3 x SATA III, 1 x SATA III or 1 x Mini PCI-e Slot support SSD by auto switch IC 1 x full size Mini PCI-e Slot with SIM card slot 1 x M.2 2230 Type A Slot 1 x PCI-e x 16 3 x PCI-e x 1 2 x USB 2.0 by pin header 1 x PS/2 KB or MS + 2 x USB2.0 Type A connector 4 x USB 3.0 at I/O 5 x RS232, 1 x RS232/422/485 Line in, Mic in, Line out 8 Bits GPIO 1 x LPT 1 x S/PIDF Onboard Infineon SLB9665 support TPM 2.0 ATX Power |
| Watchdog Timer | H/W Reset, 1sec. – 65535sec./min. 1sec. or 1min. step |
| H/W Status Monitor | CPU temperature monitoring Voltages monitoring CPU fan speed control |
| Expansion | 1 x PCI-e x 16 3 x PCI-e x 1 3 x SATA III 1 x SATA III or 1 x Mini PCI-e Slot support SSD by auto switch IC 1 x full size Mini PCI-e Slot with SIM card slot 1 x M.2 2230 Type A Slot |
| Display | |
| Chipset | Intel® H110 Express chipset |
| Resolution | VGA: 2048 x 1536@50 Hz HDMI: 4096 x 2160@24 Hz, 2560 x 1600@60 Hz |

ERX-H110KP User's Manual

| | |
|--------------------------------|---|
| | DP: 4096 x 2304@60Hz |
| Multiple Display | Dual Display |
| Audio | |
| Audio Codec | Realtek ALC892 HD Audio Decoding Controller |
| Ethernet | |
| LAN Chip | 1 x Intel® I219LM Gigabit Ethernet PHY 1 x Intel® I211AT co-lay I210AT PCI-e Gigabit Ethernet |
| Internal I/O Connectors | |
| Internal I/O Connector | <p>Storage:</p> <ul style="list-style-type: none"> - 1 x SATA III or 1 x full size Mini PCI-e support mSATA by BIOS selection - 3 x SATA III <p>1 x full size Mini PCI-e Slot with SIM card slot</p> <p>1 x M.2 2230 Type A Slot</p> <p>COM 1 Pin9 power selection:</p> <ul style="list-style-type: none"> - 1 x 2 x 3 pin, pitch 2.00mm connector for COM 1 support RS232 with Pin 9,+5V/+12V/RI <p>COM 2:</p> <ul style="list-style-type: none"> - 1 x 2 x 3 pin, pitch 2.00mm connector for COM 2 support RS232 with Pin 9,+5V/+12V/RI - 1 x 2 x 3 pin, pitch 2.00mm connector for COM 2 support RS422/485 connector, Pin 5 with +5V <p>COM 2: - 1 x 2 x 5 pin, pitch 2.00mm connector for COM2 support RS-232 connector</p> <p>COM 3 ~ 6.</p> <ul style="list-style-type: none"> - 4 x 2 x 5 pin, pitch 2.00mm connector for COM 3~6: support RS-232 connector - 4 x 2 x 3 pin, pitch 2.00mm connector for COM 3~6 support RS232 with Pin 9,+5V/+12V/RI <p>2 x USB 2.0 by pin header</p> <p>USB Wake up by BIOS Setting</p> <p>1 x 1 x 4 pin, pitch 2.54mm CPU fan connector with smart fan function supported</p> <p>1 x 1 x 4 pin, pitch 2.54mm System fan connector with smart fan function supported</p> <p>1 x 1 x 3 pin, pitch 2.54mm System fan connector</p> <p>1 x 2 x 5 pin, pitch 2.54mm connector for front panel</p> <p>1 x 2 x 10 pin, pitch 2.54mm connector for Auxiliary panel</p> <p>1 x 4 pin, pitch 2.54mm connector for Speaker Buzzer</p> <p>1 x 2 x 5 pin, pitch 2.54mm connector for front Audio</p> <p>1 x 4 pin, pitch wafer 2.00mm connector for 6W x 2 Speaker</p> <p>1 x 1 x 4 pin, pitch 2.54mm connector for S/PDIF</p> <p>1 x 1 x 3pin, pitch 2.54mm connector for COMS Clear</p> <p>1 x horizontal type battery connector</p> |


| | |
|---|---|
| | Co-lay 1 x 2 Pin Pitch 1.25mm horizontal type battery connector 1 x 2 x 6 pin, pitch 2.00mm connector for 8 bits GPIO 1 x 2 x 3 pin, pitch 2.00mm connector for SGPIO (Only support C236 PCH platform) 1 x 5 pin, pitch 2.54mm connector for SMBus 1 x 2 x 4 pin, pitch 2.00mm connector for BIOS SPI 1 x 2 x 5 pin, pitch 2.0mm connector for LPC Onboard buzzer 1 x 2 x 13 pin, pitch 2.54mm connector for LPT 1 x 1 x 6 pin, pitch 2.5mm BOX connector for KB/Mouse 1 x 1 x 3 pin pitch 2.00mm connector for AT/ATX jumper 1 x 2 x 12 pin ATX power connector 1 x 2 x 4 pin ATX 12V power connector |
| Rear I/O Connectors | |
| Rear Side External I/O Connector | 2 x RJ-45 with Dual deck USB3.0 connector 1 x VGA 1 x DP 1 x HDMI COM1 support RS-232 DB9 connector, Pin 9 with / +5V&+12V/RI Supported 1 x Line-out ,1 x Mic-In,1 x Line-in PS/2 KB or MS + 2 x USB2.0 Type A connector |
| Mechanical & Environmental | |
| Power Requirement | +12V/+5V/5VSB/+3.3V/-12V |
| ACPI | Single power ATX Support S0, S3, S4, S5 |
| Power Type | ATX mode |
| Operating Temp. | 0 ~ 60°C (32 ~ 140°F) |
| Storage Temp. | -40 ~ 75°C |
| Operating Humidity | 0% ~ 90% relative humidity, non-condensing |
| Size (L x W) | 243.84mm x 243.84mm |
| Weight | 0.60 kg |

**Note:**

1. The Windows 7 & Windows 8 must be Setup USB 3.0 driver.
2. Specifications are subject to change without notice.


1.6 Architecture Overview—Block Diagram

The following block diagram shows the architecture and main components of ERX-H110KP.

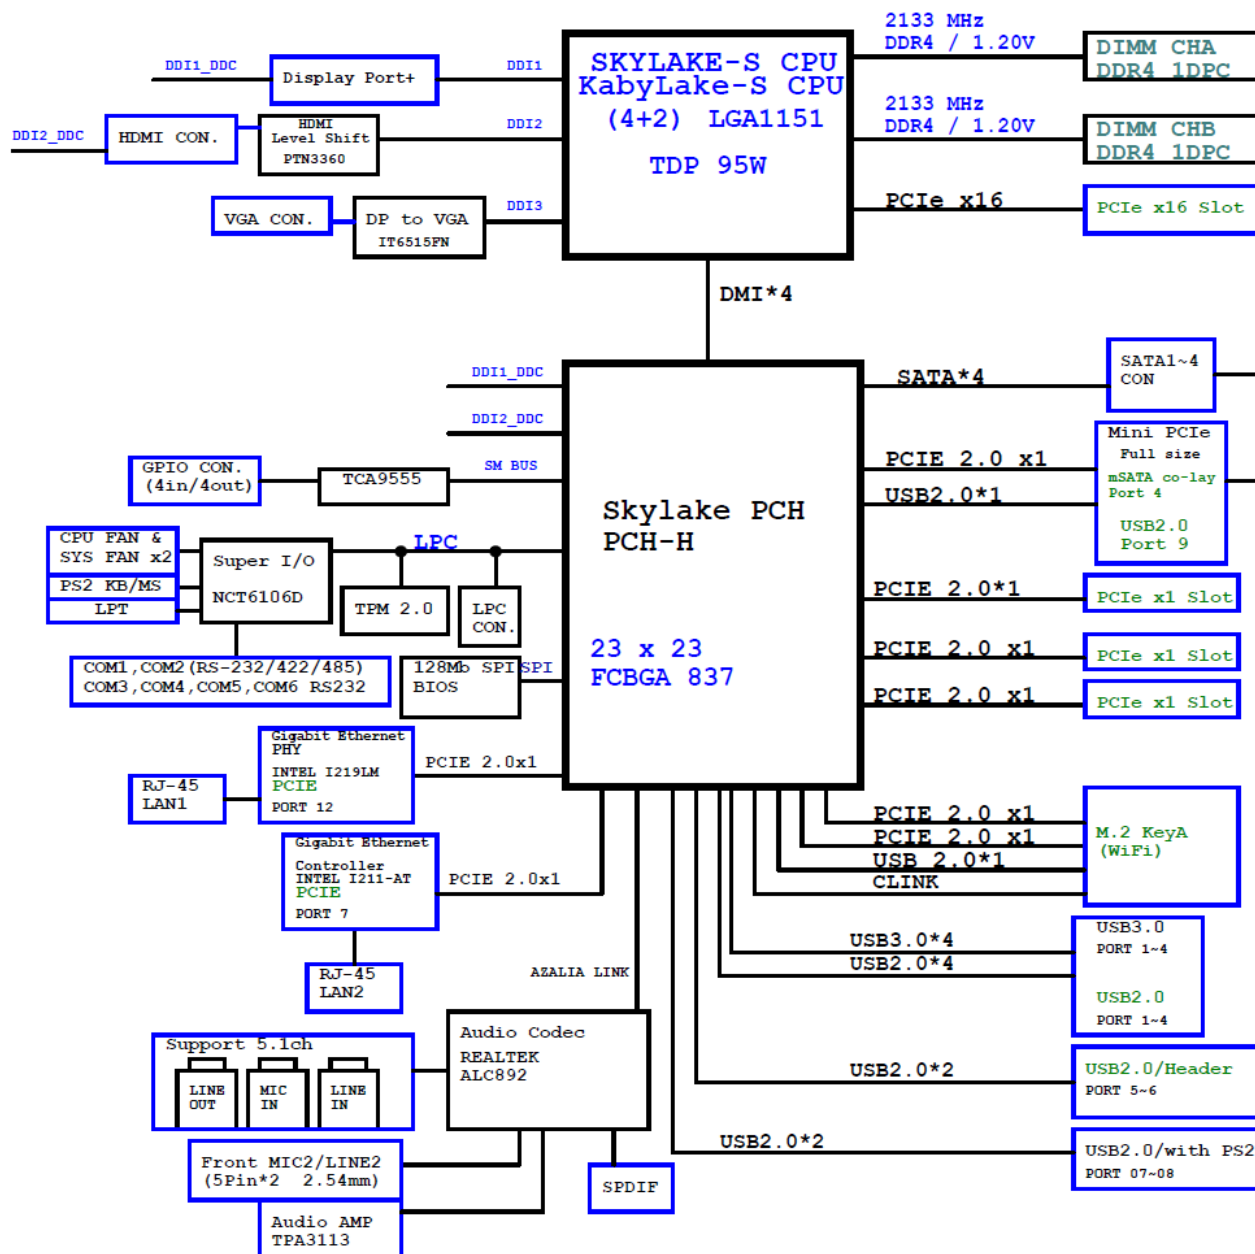

2. Hardware Configuration


2.1 Product Overview

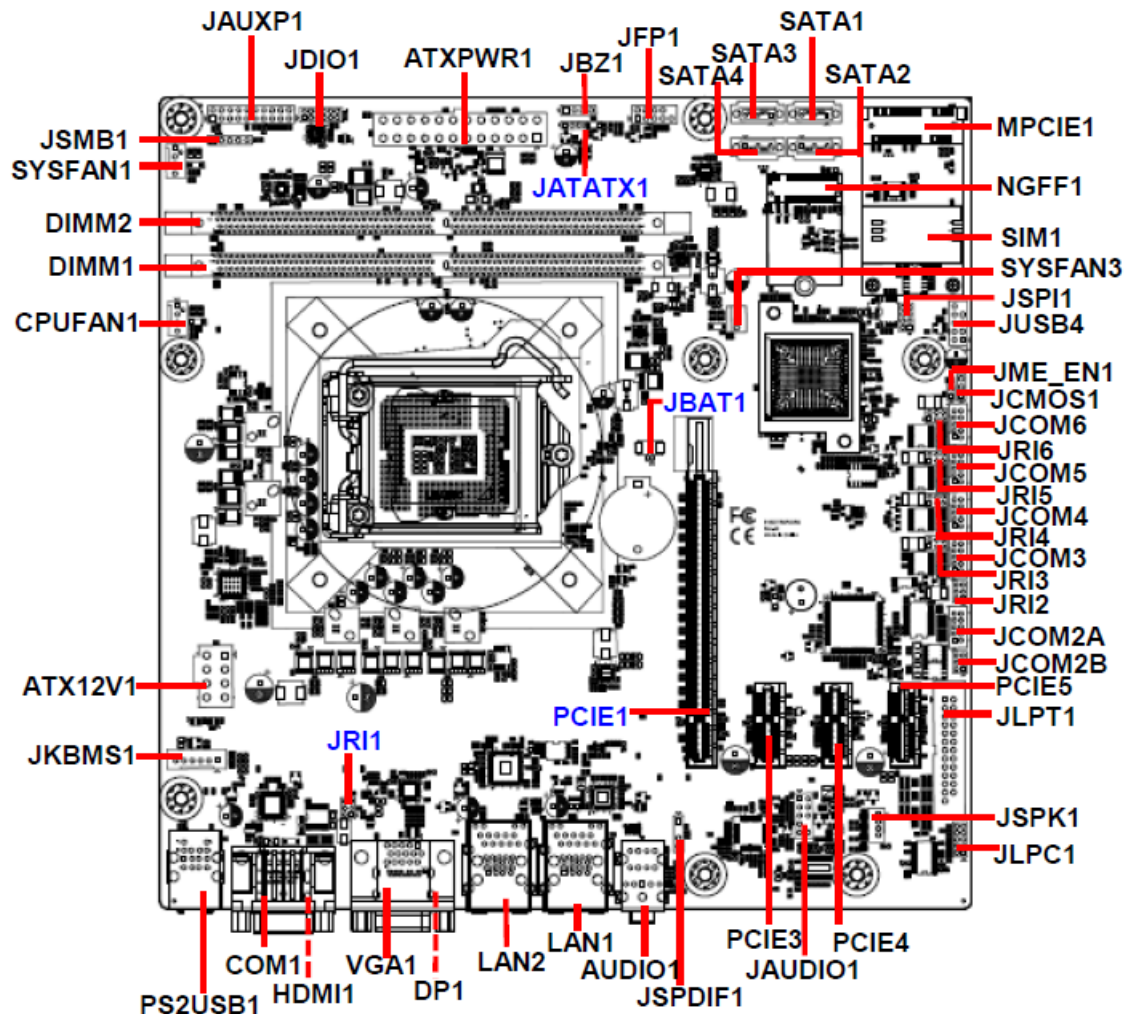

2.2 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

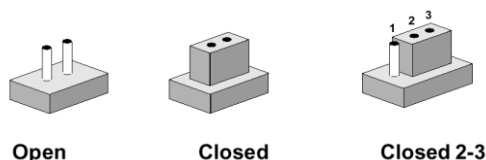

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

| Label | Function | Note |
|----------------|--|-----------------------------|
| JRI1/2/3/4/5/6 | Serial port 1/2/3/4/5/6 pin9 signal select | 3 x 2 header, pitch 2.00mm |
| JATATX1 | AT/ATX Power Mode Select | 3 x 1 header, pitch 2.00mm |
| JCMOS1 | Clear CMOS | 3 x 1 header, pitch 2.54mm |
| JME_EN1 | ME update (For Flash BIOS use) | 2 x 1 header, pitch 2.00 mm |

Connectors


| Label | Function | Note |
|---------|-------------------------------|-----------------------------|
| CPUFAN1 | CPU fan connector | 4 x 1 wafer, pitch 2.54mm |
| SYSFAN1 | System fan connector 1 | 4 x 1 wafer, pitch 2.54mm |
| SYSFAN3 | System fan connector 2 | 3 x 1 wafer, pitch 2.54mm |
| JFP1 | Front panel setting connector | 5 x 2 header, pitch 2.54 mm |
| DIMM1/2 | 288-pin DDR4 DIMM socket | |

ERX-H110KP User's Manual

| | | |
|--------------------|---|------------------------------|
| AUDIO1 | Line out, Mic in, Line out | |
| JAUDIO1 | Front Audio connector | 5 x 2 header, pitch 2.54 mm |
| JSPI1 | SPI connector | 4 x 2 header, pitch 2.00mm |
| COM1 | Serial Port 1 connector | D-sub 9 pin, male |
| JCOM2A | Serial Port 2 connector | 5 x 2 wafer, pitch 2.00mm |
| JCOM2B | COM2 RS485/422 connector | 3 x 2 header, pitch 2.00 mm |
| JCOM3/4/5/6 | Serial Port 3/4/5/6 connector | 5 x 2 wafer, pitch 2.00mm |
| JDIO1 | General purpose I/O connector | 6 x 2 header, pitch 2.00mm |
| JSPK1 | Amplifier connector | 1 x 4 wafer, pitch 2.00 mm |
| PS2USB1 | PS/2 keyboard or mouse connector 2 x USB 2.0 connector | |
| LAN1/2 | 2 x RJ-45 with Dual deck USB 3.0 connector | |
| JUSB4 | USB 2.0 connector | 5 x 2 header, pitch 2.54mm |
| JSPDIF1 | Sony/Philips Digital Interface | 4 x 1 header, pitch 2.54mm |
| JBZ1 | PC Buzzer header | 4 x 1 header, pitch 2.54mm |
| JLPC1 | LPC connector | 5 x 2 header, pitch 2.00mm |
| PCIE1 | PCI-e x 16 connector | |
| PCIE3/4/5 | 3 x PCI-e x 1 | |
| JKBMS1 | PS/2 keyboard & mouse header | 6 x 1 header, pitch 2.50 mm |
| JBAT1 | Battery connector | 2 x 1 wafer, pitch 1.25mm |
| MPCIE1 | Full size Mini-PCI-e slot | |
| SIM1 | SIM card slot | |
| ATXPWR1 | ATX Power connector | 12 x 2 wafer, pitch 4.20mm |
| ATX12V1 | ATX 12V power connector | 2 x 4 wafer, pitch 4.20mm |
| SATA1~4 | Serial ATA III connector 1~4 | |
| HDMI1 | HDMI connector | |
| DP1 | DP connector | |
| VGA1 | VGA connector | |
| JAUXP1 | Auxiliary panel connector | 10 x 2 header, pitch 2.54 mm |
| NGFF1 | M.2 2230 Type A Slot | |
| JLPT1 | LPT connector | 13 x 2 header, pitch 2.54 mm |
| JSMB1 | SMBus connector | 5 x 1 header, pitch 2.54 mm |

2.3 Setting Jumpers & Connectors

2.3.1 Serial port 1/2 pin9 signal select (JRI1/2)

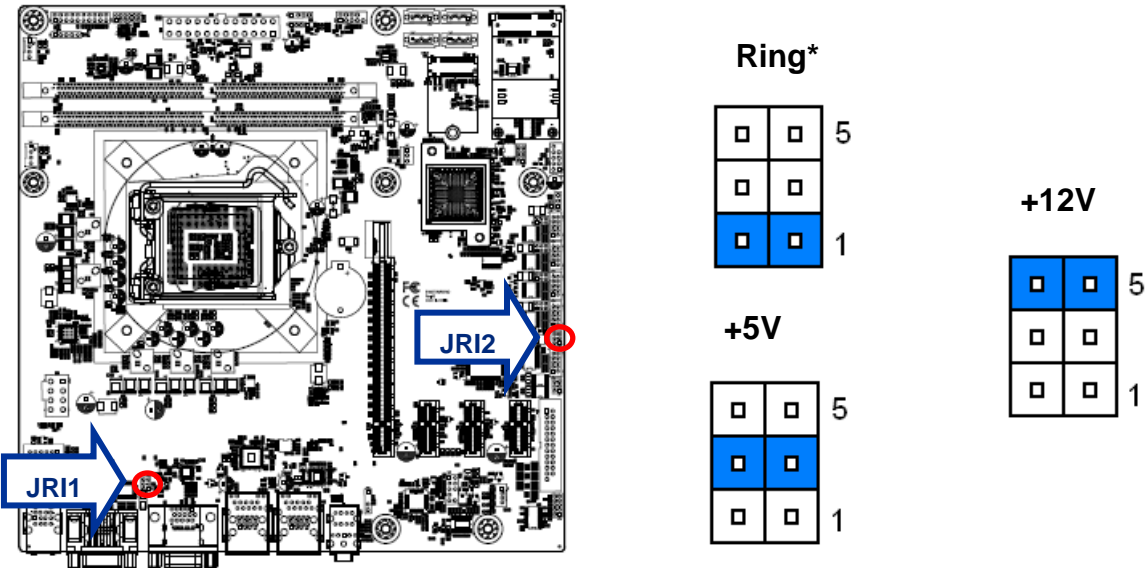


* Default

Note:

Max Current 1A.

2.3.2 Serial port 3/4/5/6 pin9 signal select (JRI3/4/5/6)

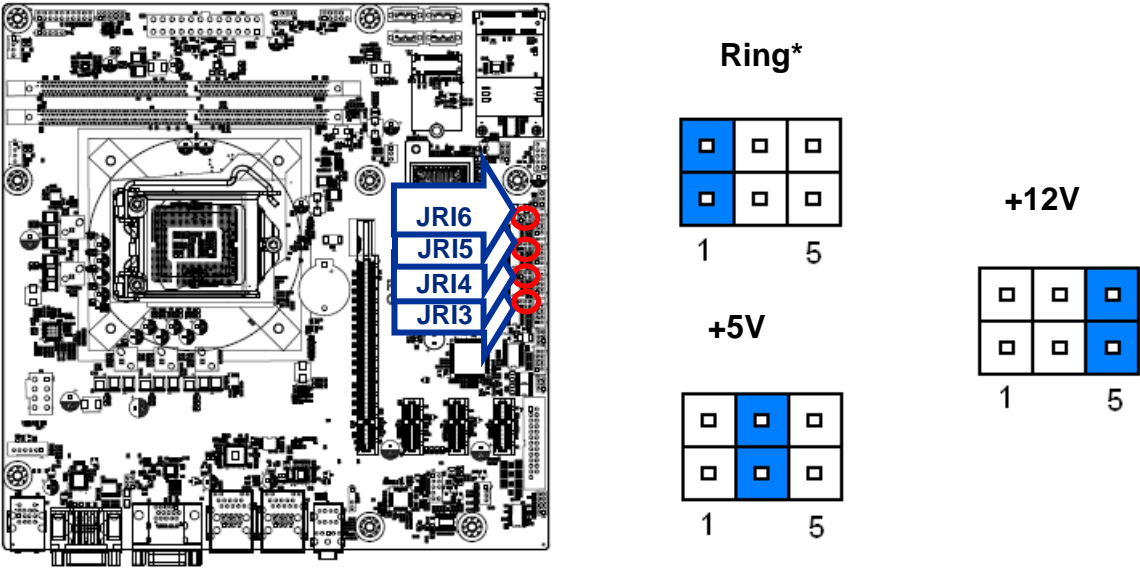


* Default

Note:

Max Current 1A.


2.3.3 AT/ATX Power Mode Select (JATATX1)

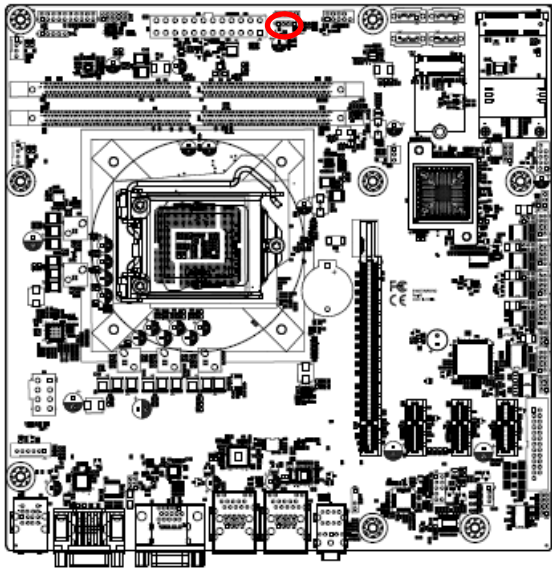

ATX*




AT

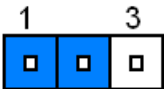


* Default


2.3.4 Clear CMOS (JCMOS1)

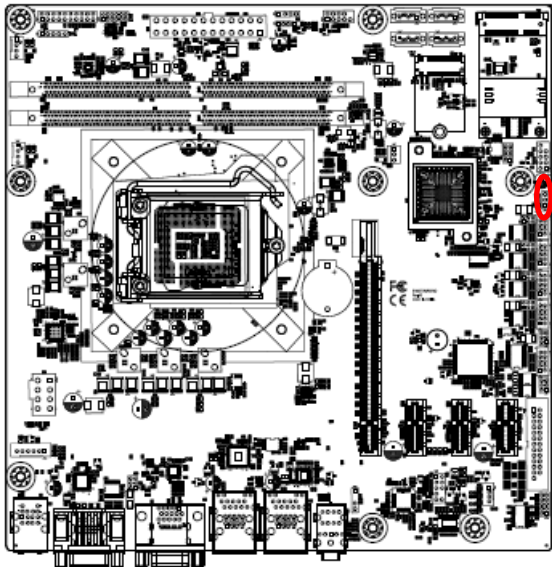

Protect*

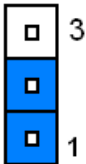

Clear CMOS

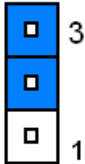


* Default


Note:

Clear CMOS must work on G3 (AC-OFF) state.


2.3.5 ME update (For Flash BIOS use) (JME_EN1)

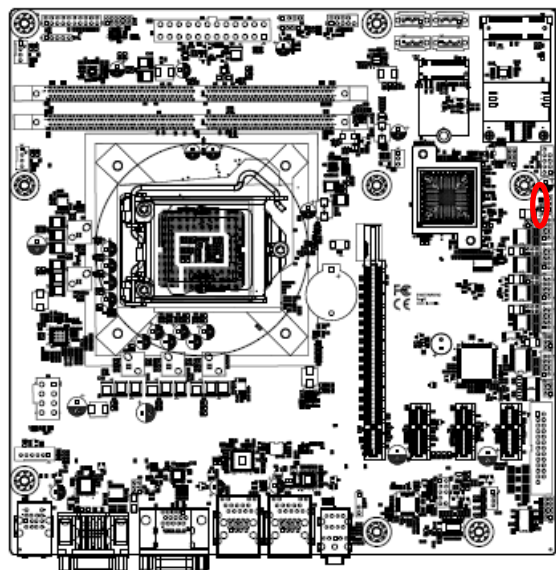

Open*





Short



* Default

2.3.6 General purpose I/O connector (JDIO1)

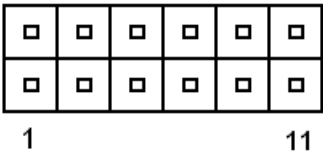
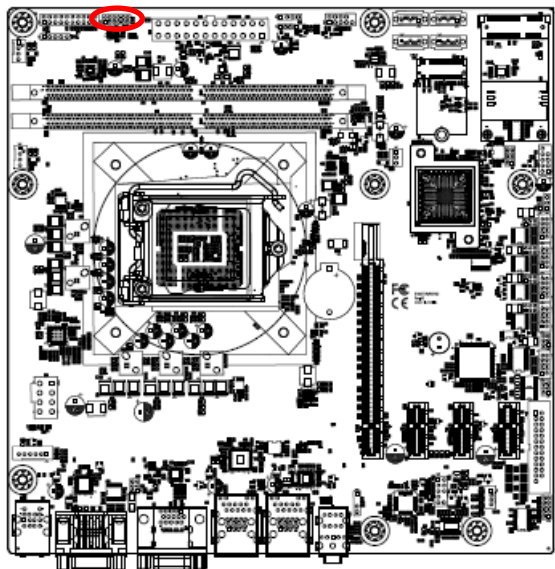


Note:

Max current 1A change as below Provide max current 1A for +5V.



| Signal | PIN | PIN | Signal |
|--------------|-----|-----|---------------|
| DI0 | 1 | 2 | DO0 |
| DI1 | 3 | 4 | DO1 |
| DI2 | 5 | 6 | DO2 |
| DI3 | 7 | 8 | DO3 |
| SMB_CLK_9555 | 9 | 10 | SMB_DATA_9555 |
| GND | 11 | 12 | +5V |

2.3.7 Serial port 2 connector (JCOM2A)

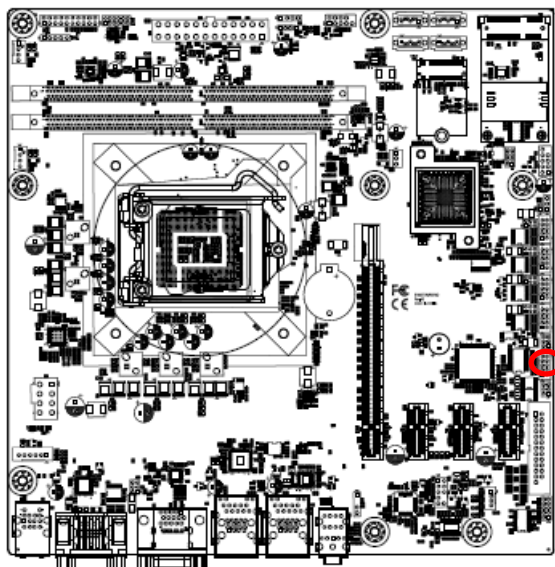

| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| RI | 9 | 10 | NC |
| RTS | 7 | 8 | CTS |
| GND | 5 | 6 | DSR |
| TXD | 3 | 4 | DTR |
| DCD | 1 | 2 | RXD |



2.3.8 COM2 RS485/422 connector (JCOM2B)

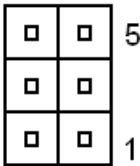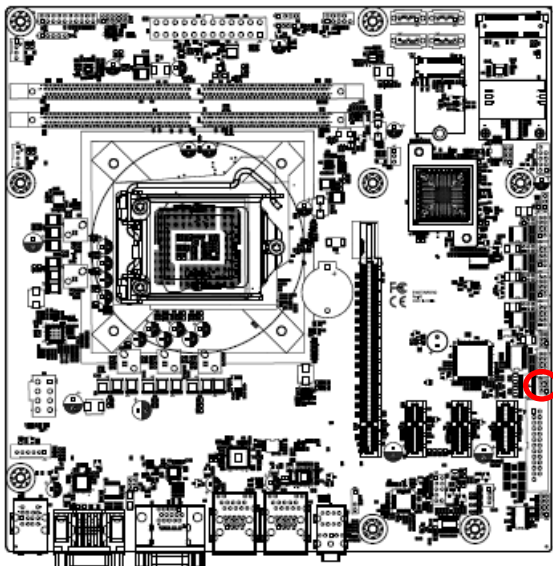

| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| GND | 6 | 5 | +5V |
| 422RX+ | 4 | 3 | 485TX+ |
| 422RX- | 2 | 1 | 485TX- |


Note:
Max Current 1A.

2.3.9 Serial port 3/4/5/6 connector (JCOM3/4/5/6)

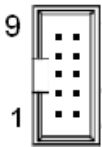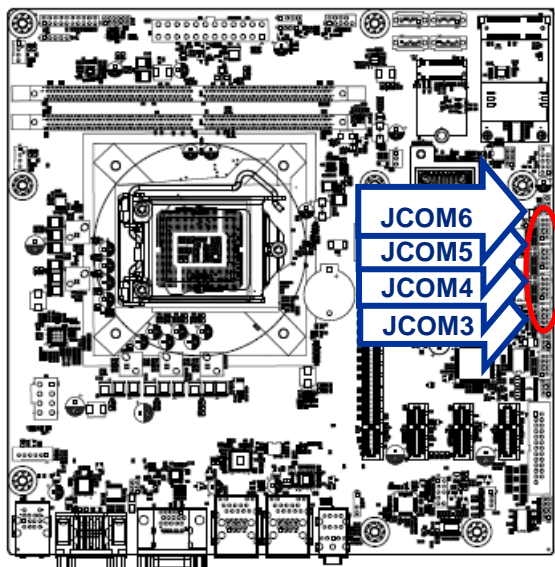



| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| RI | 9 | 10 | NC |
| RTS | 7 | 8 | CTS |
| GND | 5 | 6 | DSR |
| TXD | 3 | 4 | DTR |
| DCD | 1 | 2 | RXD |

2.3.10 Sony/Philips Digital Interface (JSPDIF1)

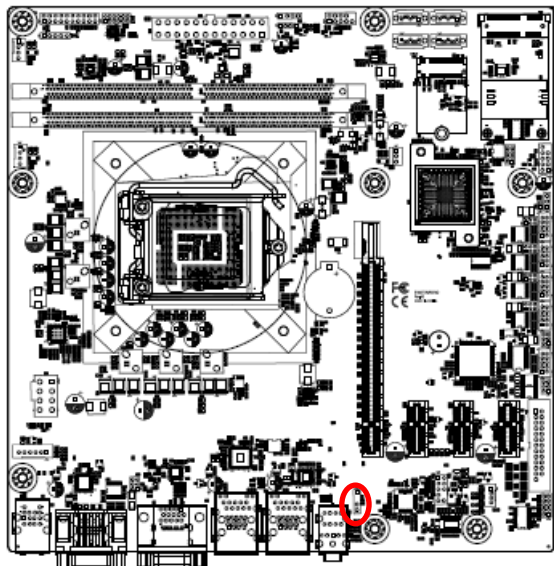



| Signal | PIN |
|---------|-----|
| +5V | 1 |
| | 2 |
| SPDIF_O | 3 |
| GND | 4 |

2.3.11 ATX Power connector (ATXPWR1)

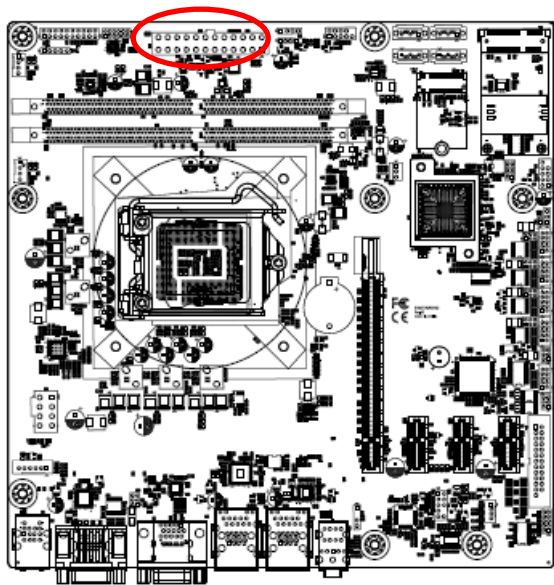



| Signal | PIN | PIN | Signal |
|-----------|-----|-----|-----------|
| +3.3V | 1 | 13 | +3.3V |
| +3.3V | 2 | 14 | -12V |
| GND | 3 | 15 | GND |
| +5V | 4 | 16 | ATX_PSON# |
| GND | 5 | 17 | GND |
| +5V | 6 | 18 | GND |
| GND | 7 | 19 | GND |
| ATX_PWRGD | 8 | 20 | -5V |
| +V5SB | 9 | 21 | +5V |
| +12V | 10 | 22 | +5V |
| +12V | 11 | 23 | +5V |
| +3.3V | 12 | 24 | GND |

2.3.12 ATX 12V power connector (ATX12V1)

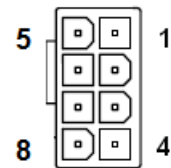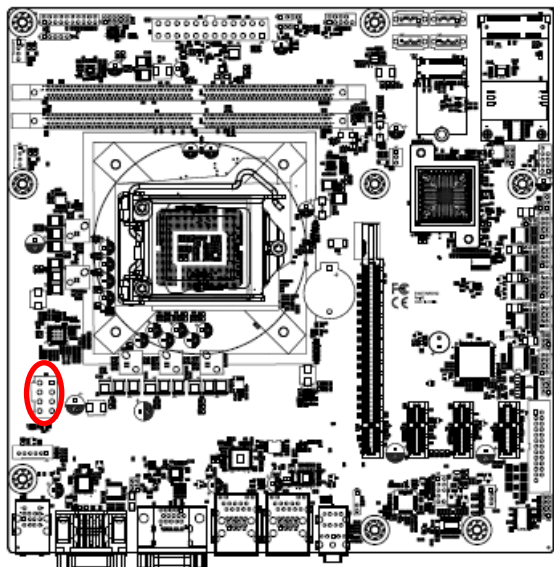



| Signal | PIN | PIN | Signal |
|--------|-----|-----|--------|
| +12V | 5 | 1 | GND |
| +12V | 6 | 2 | GND |
| +12V | 7 | 3 | GND |
| +12V | 8 | 4 | GND |

2.3.13 USB 2.0 connector (JUSB4)

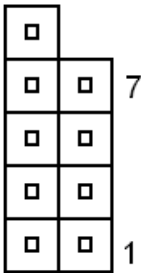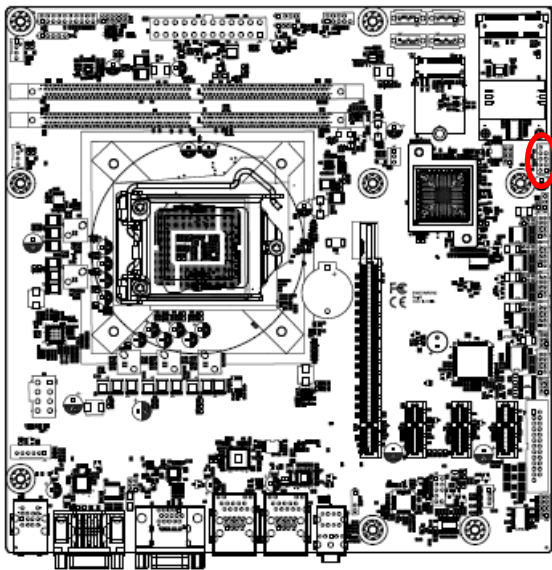

| Signal | PIN | PIN | Signal |
|-----------|-----|-----|-----------|
| NC | 10 | | |
| GND | 8 | 7 | GND |
| USB_R_DP5 | 6 | 5 | USB_R_DP6 |
| USB_R_DN5 | 4 | 3 | USB_R_DN6 |
| USBVCC_56 | 2 | 1 | USBVCC56 |



2.3.14 Battery connector (JBAT1)

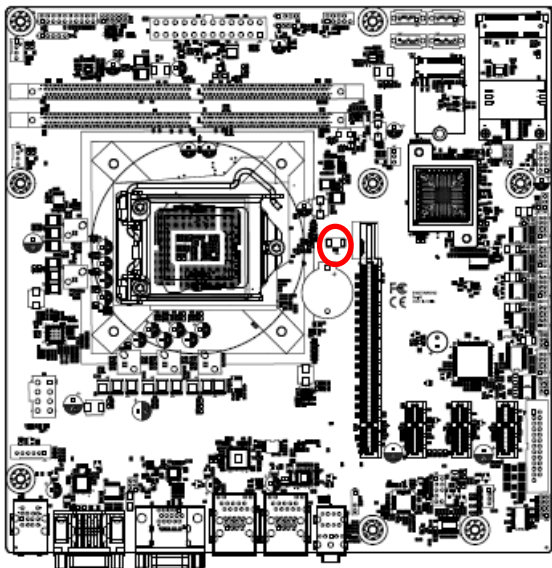

| Signal | PIN |
|------------|-----|
| RTC_VBAT_1 | 1 |
| GND | 2 |

Note:
This connector is reserved for change battery.

2.3.15 Front Audio connector (JAUDIO1)

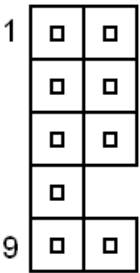
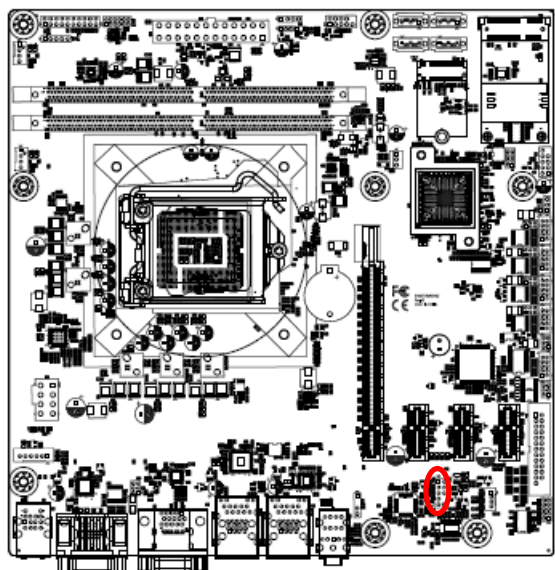


| Signal | PIN | PIN | Signal |
|-----------|-----|-----|------------|
| MIC2_L | 1 | 2 | GND |
| MIC2_R | 3 | 4 | ACZ_DET#_R |
| LINE2_RIN | 5 | 6 | MIC2_JD |
| GND | 7 | | |
| LINE2_LIN | 9 | 10 | LINE2_JD |

2.3.15.1 Signal Description –Audio connector (JAUDIO1)



| Signal | Signal Description |
|----------|----------------------------------|
| LINE2_JD | AUDIO IN (LINE_RIN/LIN)sense pin |
| MIC2_JD | MIC IN (MIC_RIN/LIN) sense pin |

2.3.16 LPC connector (JLPC1)

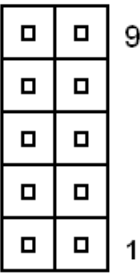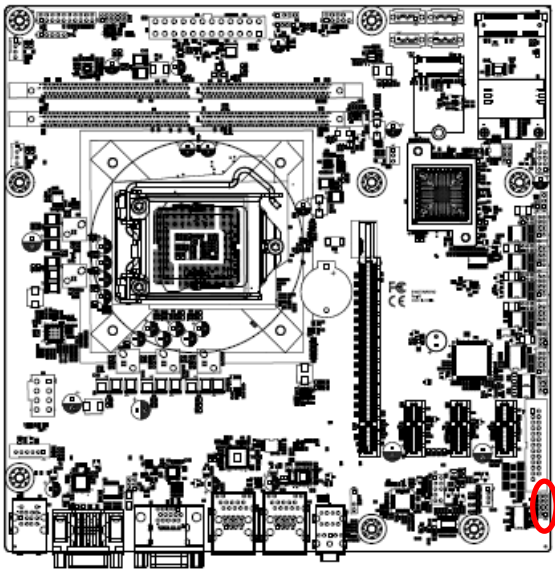


| Signal | PIN | PIN | Signal |
|--------------|-----|-----|--------------|
| GND | 10 | 9 | LPC_SERIRQ_R |
| LPC_CLK | 8 | 7 | LPC_AD3_R |
| LPC_FRAME#_R | 6 | 5 | LPC_AD2_R |
| BUF_PLT_RST# | 4 | 3 | LPC_AD1_R |
| +3.3V | 2 | 1 | LPC_AD0_R |

2.3.17 SPI connector (JSPI1)

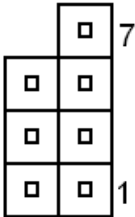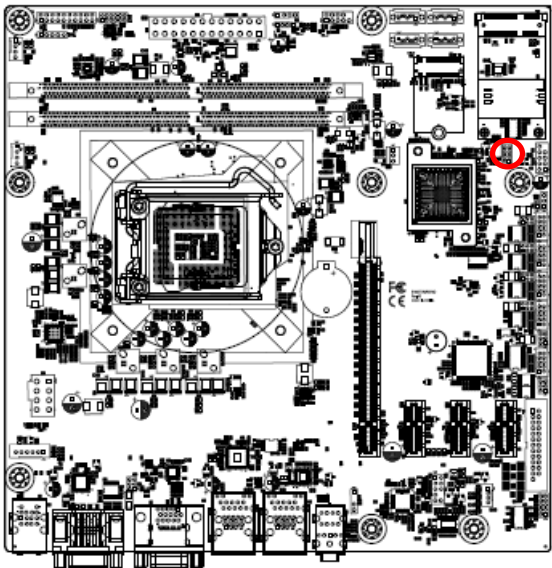

| Signal | PIN | PIN | Signal |
|-------------|-----|-----|-------------|
| | | 7 | SSPI_HOLD#0 |
| SSPI_SI_R | 6 | 5 | SSPI_SO_R |
| SSPI_SCLK_R | 4 | 3 | SSPI_CS0#_R |
| GND | 2 | 1 | +3.3V |

2.3.18 Amplifier connector (JSPK1)


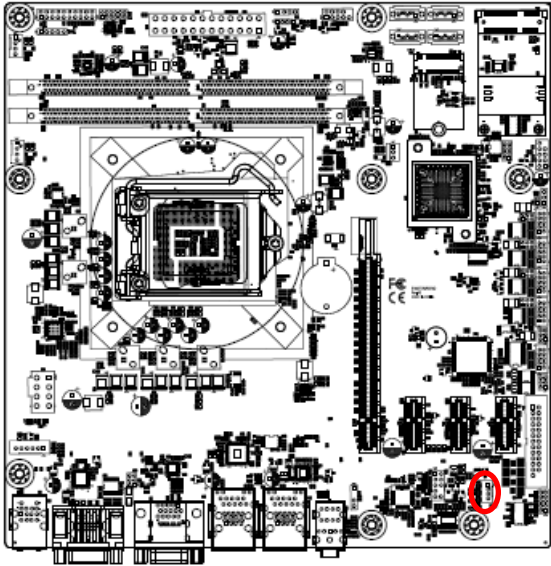


| Signal | PIN |
|--------|-----|
| SPK_L+ | 1 |
| SPK_L- | 2 |
| SPK_R+ | 3 |
| SPK_R- | 4 |

Note:



Support 6W x 2 speakers. Mapping Connector PHR-4.

2.3.19 Front panel setting connector (JFP1)

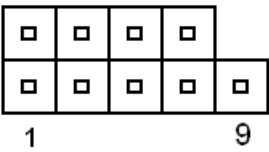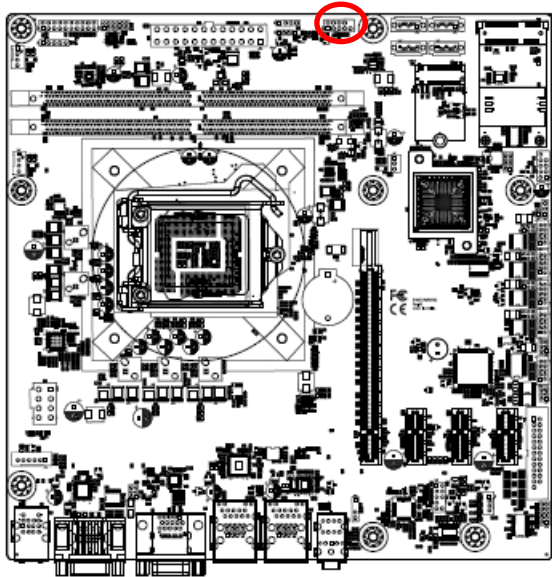



| Signal | PIN | PIN | Signal |
|-----------|-----|-----|----------|
| HDD_LED+ | 1 | 2 | PWR_LED+ |
| HDD_LED- | 3 | 4 | PWE_LED- |
| RSET_BTN# | 5 | 6 | PWRBTN# |
| GND | 7 | 8 | GND |
| NC | 9 | | |

2.3.20 CPU fan connector (CPUFAN1)

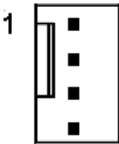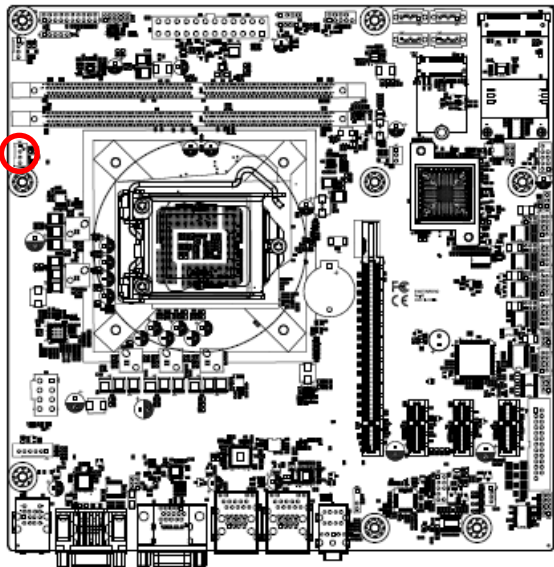



| Signal | PIN |
|-----------|-----|
| GND | 1 |
| +12V | 2 |
| CPUFANIN | 3 |
| CPUFANOUT | 4 |

2.3.21 System fan connector 1 (SYSFAN1)

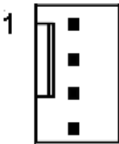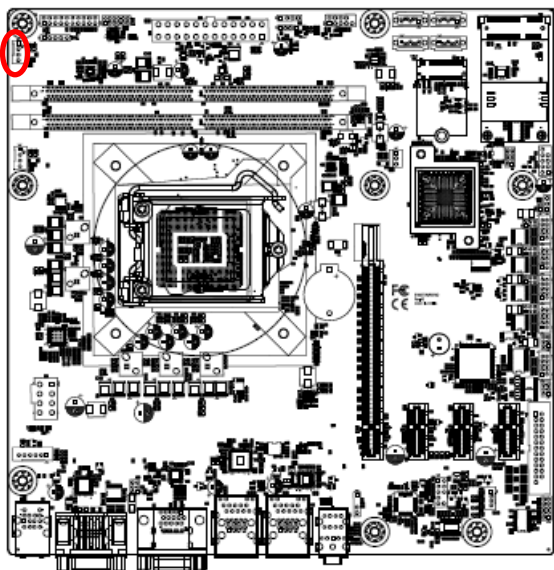



| Signal | PIN |
|------------|-----|
| GND | 1 |
| +12V | 2 |
| SYSFANIN1 | 3 |
| SYSFANOUT1 | 4 |

2.3.22 System fan connector 2 (SYSFAN3)

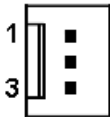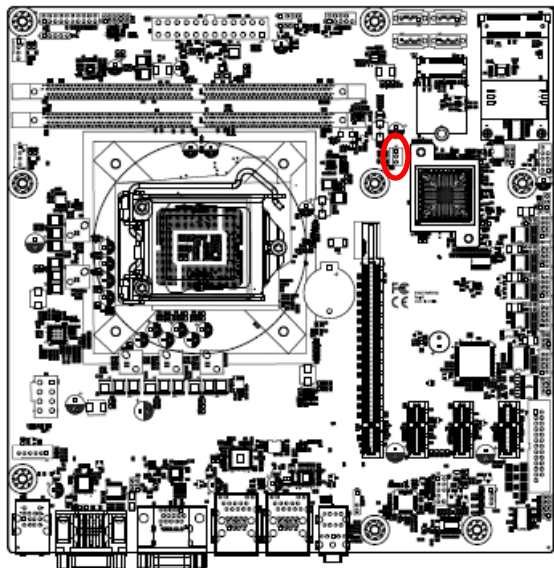



| Signal | PIN |
|--------------|-----|
| GND | 1 |
| +12V | 2 |
| SYS_FAN_IN_2 | 3 |

2.3.23 PS/2 keyboard & mouse header (JKBMS1)

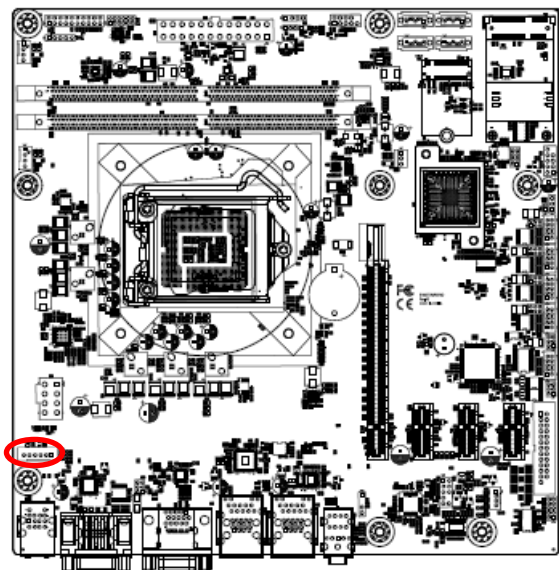



| Signal | PIN |
|--------|-----|
| KBCK | 1 |
| KBDT | 2 |
| MSDT | 3 |
| GND | 4 |
| +5V | 5 |
| MSCK | 6 |

2.3.24 SMBus connector (JSMB1)

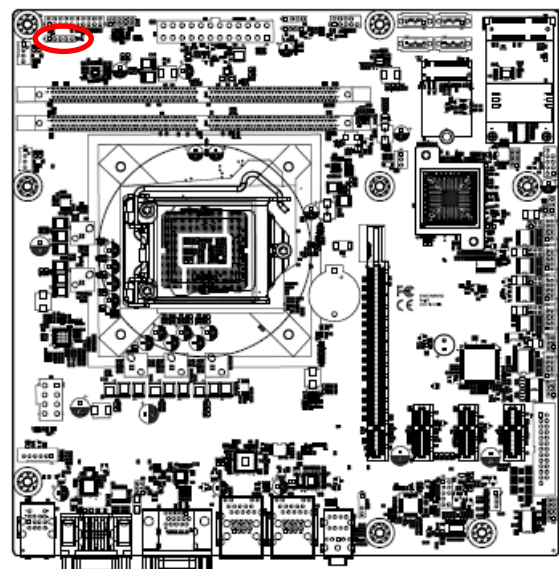



| Signal | PIN |
|-----------------|-----|
| SMB_CLK_MAIN | 1 |
| SMB_DATA_MAIN | 2 |
| SMB_ALERT#_MAIN | 3 |
| GND | 4 |
| +3.3V | 5 |

2.3.25 Auxiliary panel connector (JAUXP1)

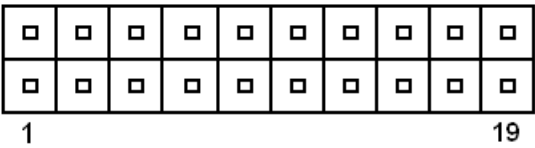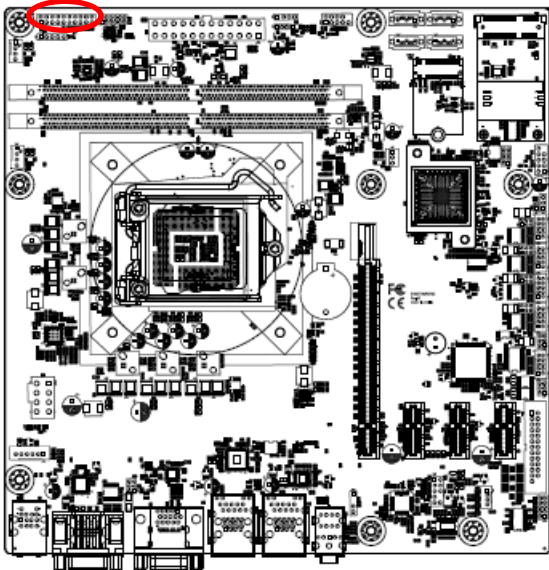


| Signal | PIN | PIN | Signal |
|----------------|-----|-----|----------------------|
| +5V | 1 | 2 | NC |
| NC | 3 | 4 | SMB_CLK_MAIN |
| CASEOPEN# | 5 | 6 | NC |
| GND | 7 | 8 | GND |
| ERROR_LED | 9 | 10 | SMB_DATA_MAIN |
| ERROR_LED# | 11 | 12 | +5V |
| FRONT_LAN1_ACT | 13 | 14 | FRONT_LAN1_LINK100# |
| GND | 15 | 16 | FRONT_LAN1_LINK1000# |
| FRONT_LAN2_ACT | 17 | 18 | FRONT_LAN2_LINK100# |
| GND | 19 | 20 | FRONT_LAN2_LINK1000# |

2.3.26 PC Buzzer header (JBZ1)

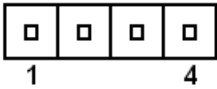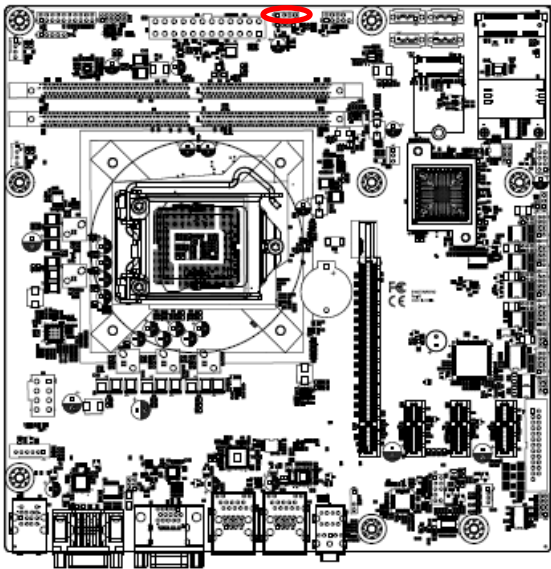



| Signal | PIN |
|----------|-----|
| +5V | 1 |
| NC | 2 |
| NC | 3 |
| SIO_BEEP | 4 |

2.3.27 LPT connector (JLPT1)

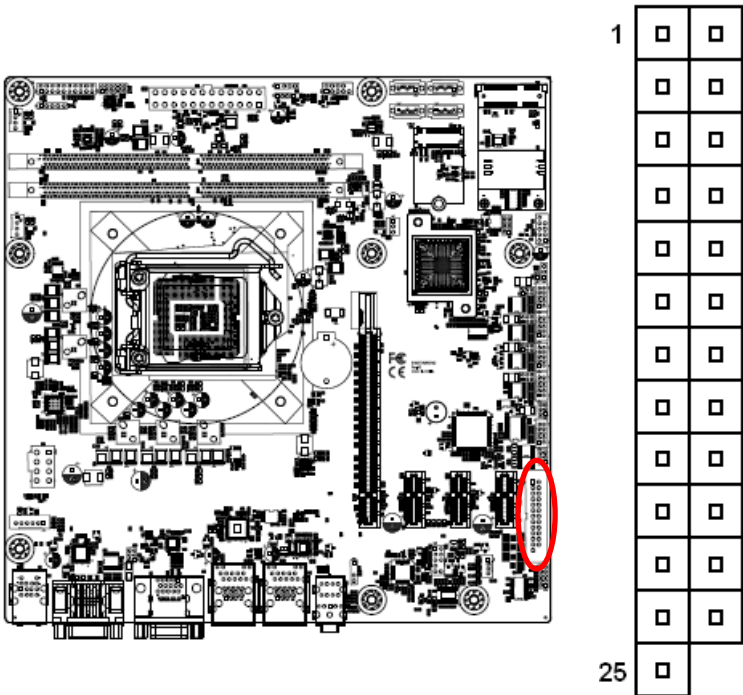

| Signal | PIN | PIN | Signal |
|---------|-----|-----|--------------|
| PT_STB- | 1 | 2 | PT_AFD# |
| PTD0 | 3 | 4 | ERR# |
| PTD1 | 5 | 6 | PT_PAR_INIT# |
| PTD2 | 7 | 8 | PT_SLIN# |
| PTD3 | 9 | 10 | GND |
| PTD4 | 11 | 12 | GND |
| PTD5 | 13 | 14 | GND |
| PTD6 | 15 | 16 | GND |
| PTD7 | 17 | 18 | GND |
| ACK# | 19 | 20 | GND |
| BUSY | 21 | 22 | GND |
| PE | 23 | 24 | GND |
| SLCT | 25 | | |

2.3.28 Gigabit LAN (RJ-45) connector (LAN1/2)

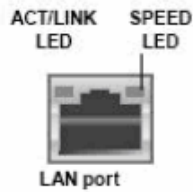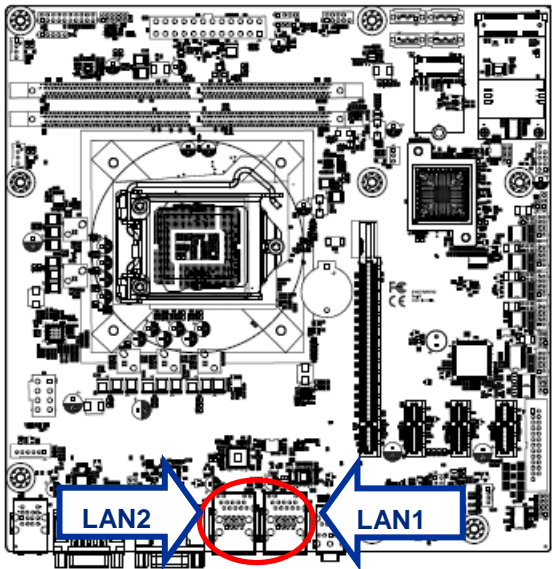

| ACT/LINK LED | | SPEED LED | |
|--------------|---------------|-----------|--------------------|
| Status | Description | Status | Description |
| OFF | No Light | OFF | 10Mbps connection |
| Orange | Linked | Green | 100Mbps connection |
| Blinking | Data activity | Orange | 1Gbps connection |

Note:
This port allows Gigabit connection to a Local Area Network (LAN) through a network hub. Refer to the table below for the LAN port LED indications.

3.BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing or <F2> immediately after switching the system on, or

By pressing the or <F2> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

Press F1 to Continue, DEL to enter SETUP

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

| Button | Description |
|---------|---|
| ↑ | Move to previous item |
| ↓ | Move to next item |
| ← | Move to the item in the left hand |
| → | Move to the item in the right hand |
| Esc key | Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu |
| + key | Increase the numeric value or make changes |
| - key | Decrease the numeric value or make changes |
| F1 key | General help, only for Status Page Setup Menu and Option Page Setup Menu |
| F2 key | Previous Values. |
| F3 key | Optimized defaults |
| F4 key | Save & Exit Setup |

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.


3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

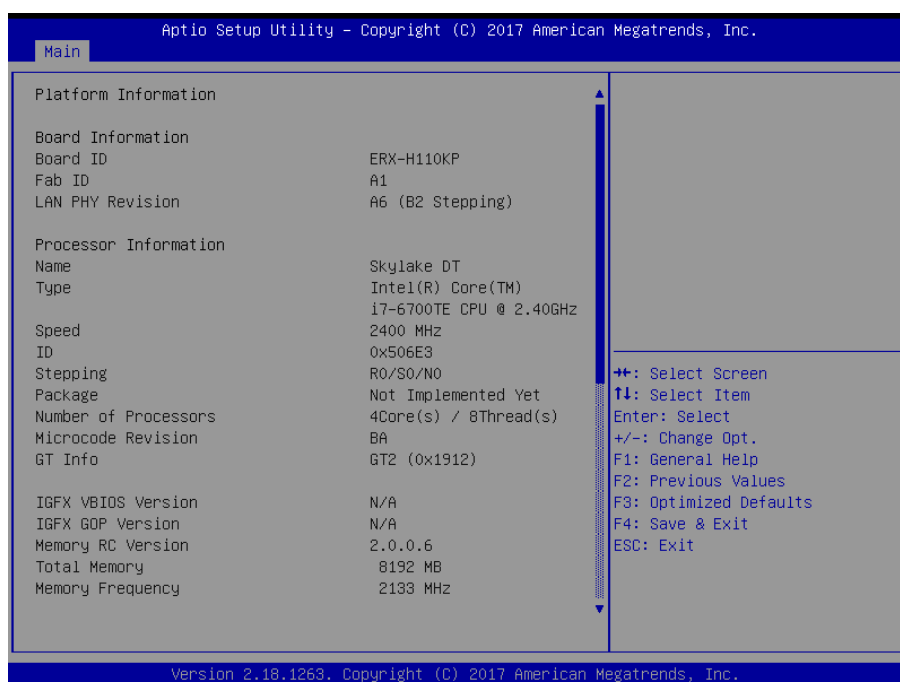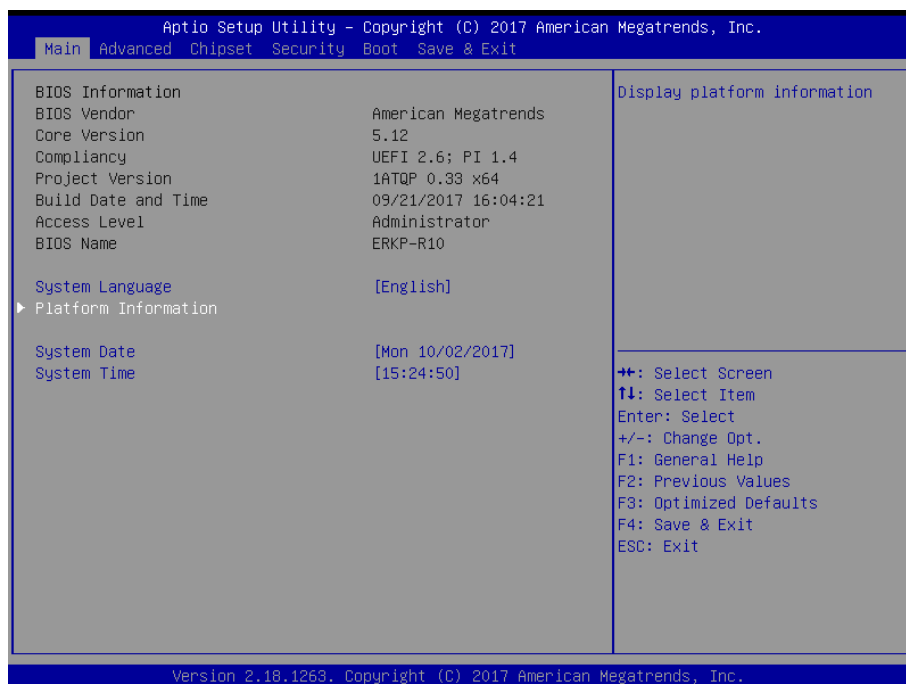

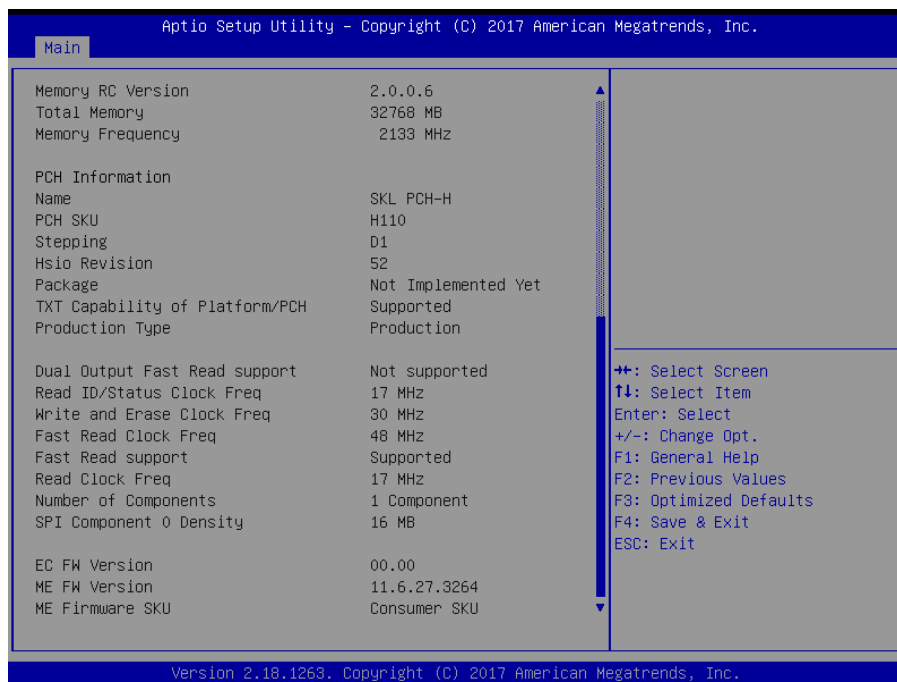

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.




Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalue.com.tw) to download the latest product and BIOS information.

3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

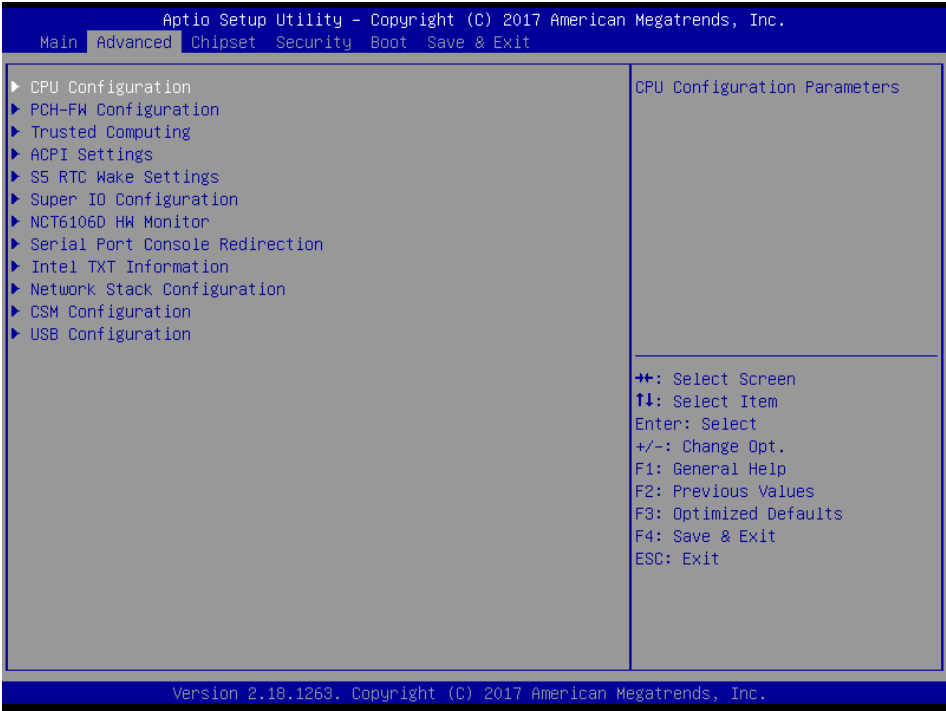


3.6.2.1 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.



| Item | Options | Description |
|--|------------------------------|---|
| Intel (VMX) Virtualization Technology | Disabled Enabled[Default] | When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. |
| Active Processor Cores | All[Default], 1 2 3 | Number of cores to enable in each processor package. |
| Hyper-Threading | Disabled Enabled[Default] | Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). |


3.6.2.1.1 CPU – Power Management Control

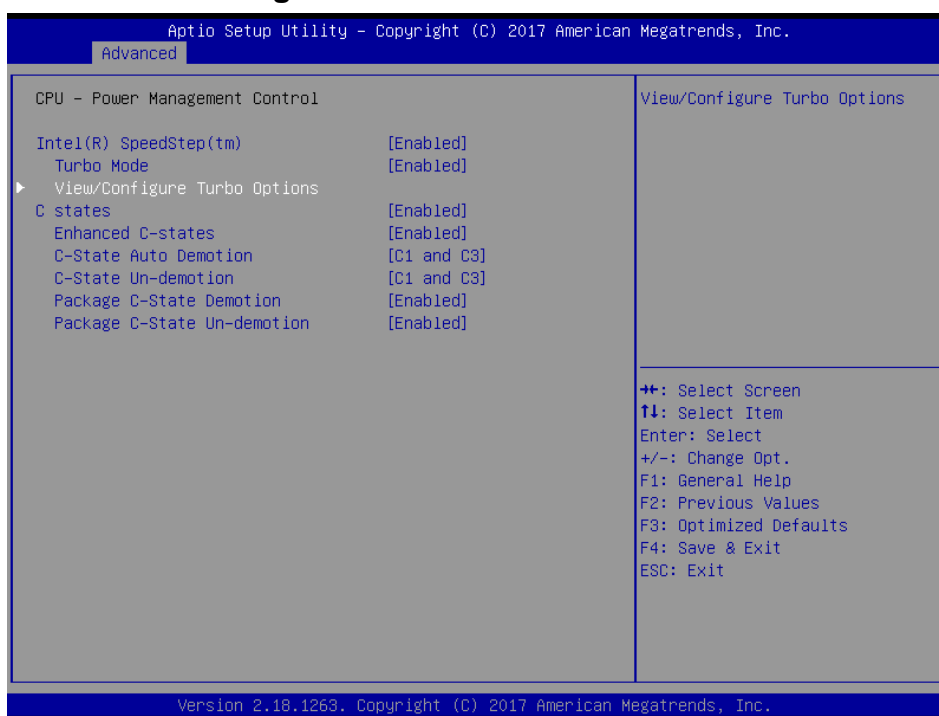

| Item | Option | Description |
|------------------------------|-------------------------------|--|
| Intel® SpeedStep™ | Disabled, Enabled[Default] | Allows more than two frequency ranges to be supported. |
| Turbo Mode | Disabled, Enabled[Default] | Enable/Disable processor Turbo Mode (requires EMTTM enabled too). AUTO means enabled, unless max turbo ratio is bigger than 16 – SKL A0 W/A. |
| C states | Disabled, Enabled[Default] | Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not utilized. |
| Enhanced C-states | Disabled, Enabled[Default] | Enable/Disable C1E. When enabled, CPU will switch to minimum speed when all cores enter C-State. |
| C-State Auto Demotion | Disabled, C1 | Configure C-State Auto Demotion. |


| | | |
|------------------------------------|---|---|
| | C3 C1 and C3[Default] | |
| C-State Un-demotion | Disabled, C1 C3 C1 and C3[Default] | Configure C-State Un-demotion. |
| Package C-State Demotion | Disabled, Enabled Auto[Default] | Enable or Disable Package C-State Demotion. 0: Disable; 1: Enable; 2: Auto (Auto: Enabled for Skylake; Disabled for Kabylake). |
| Package C-State Un-demotion | Disabled, Enabled Auto[Default] | Enable or Disable Package C-State UnDemotion. 0: Disable; 1: Enable; 2: Auto (Auto: Enabled for Skylake; Disabled for Kabylake). |

3.6.2.2 PCH-FW Configuration

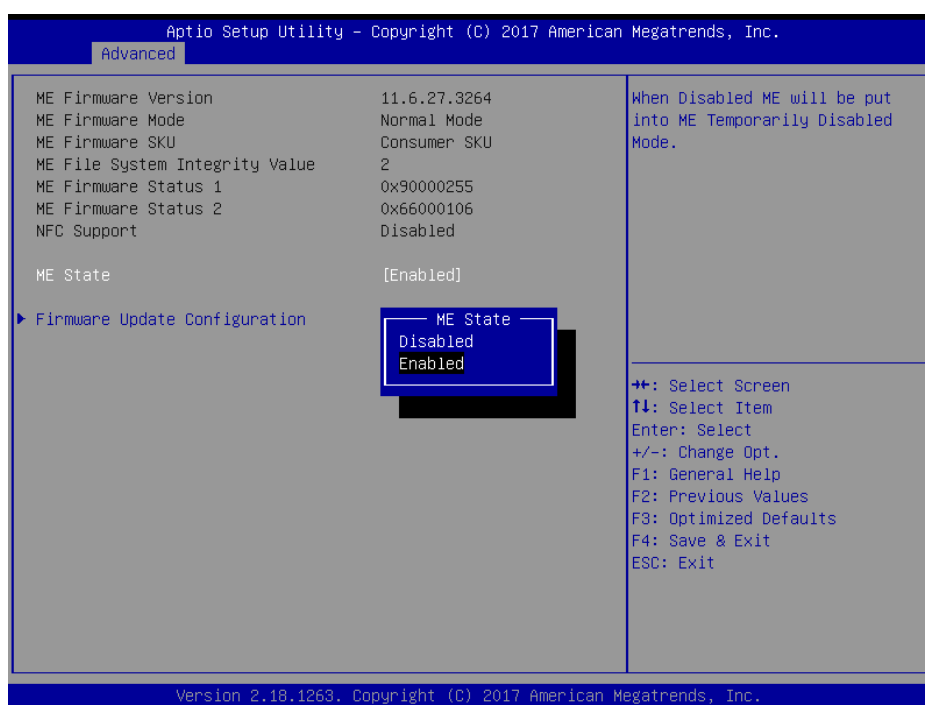


| Item | Options | Description |
|-----------------|-------------------------------|---|
| ME State | Disabled, Enabled[Default] | When Disabled ME will be put into ME Temporarily Disabled Mode. |

3.6.2.2.1 Firmware Update Configuration

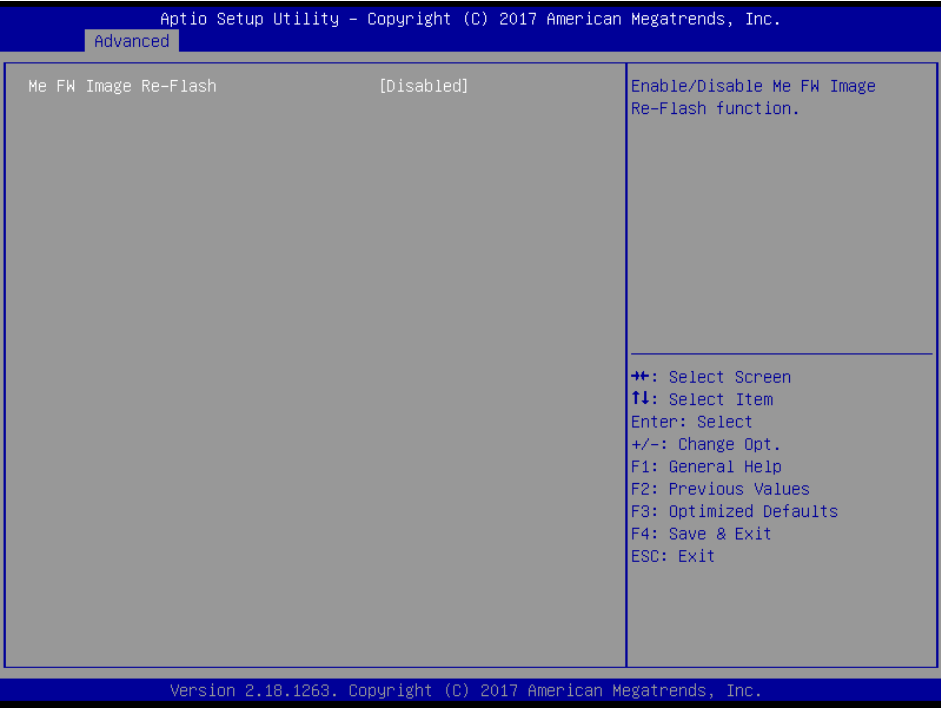


| Item | Option | Description |
|----------------------|-------------------------------|---|
| ME FW Image Re-Flash | Disabled[Default], Enabled | Enable/Disable Me FW Image Re-Flash function. |

3.6.2.3 ACPI Settings

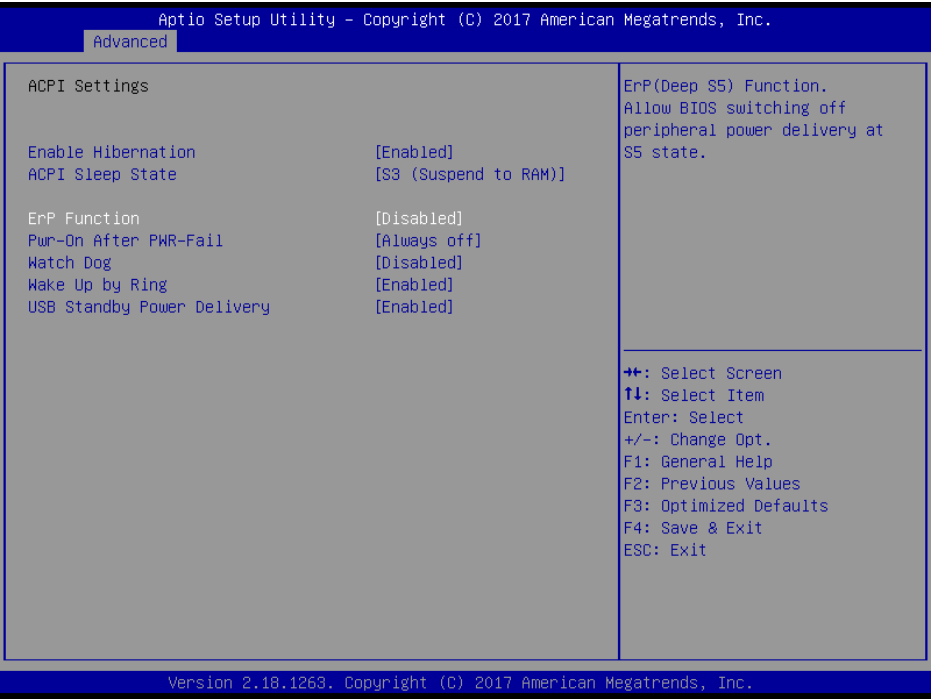


| Item | Options | Description |
|-----------------------------------|--|---|
| Enable Hibernation | Disabled Enabled[Default], | Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some OS. |
| ACPI Sleep State | Suspend Disabled, S3 (Suspend to RAM)[Default] | Select the highest ACPI sleep state the system will enter when the SUSPEDN button is pressed. |
| ErP Function | Disabled[Default], Enabled | ErP (Deep S5) Function. Allow BIOS switching off peripheral power delivery at S5 state. |
| Pwr-On After PWR-Fail | Always Off[Default] Always On Keep Last state | Specify what state to go to when power is re-applied after a power failure (G3 state). |
| Watch Dog | Disabled[Default], 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min | Select Watch Dog Timer (WDT) Mode. |
| Wake Up by Ring | Disabled Enabled[Default], | Enable/Disable system waked up by Ring signal from S3(Sleep), S4(Hibernate) and S5(Soft Off) states. |
| USB Standby Power Delivery | Disabled Enabled[Default], | Enable/Disable USB Power delivery in S3 (Sleep), S4 (Hibernate) and S5 (Soft Off) States. |

3.6.2.4 S5 RTC Wake Settings

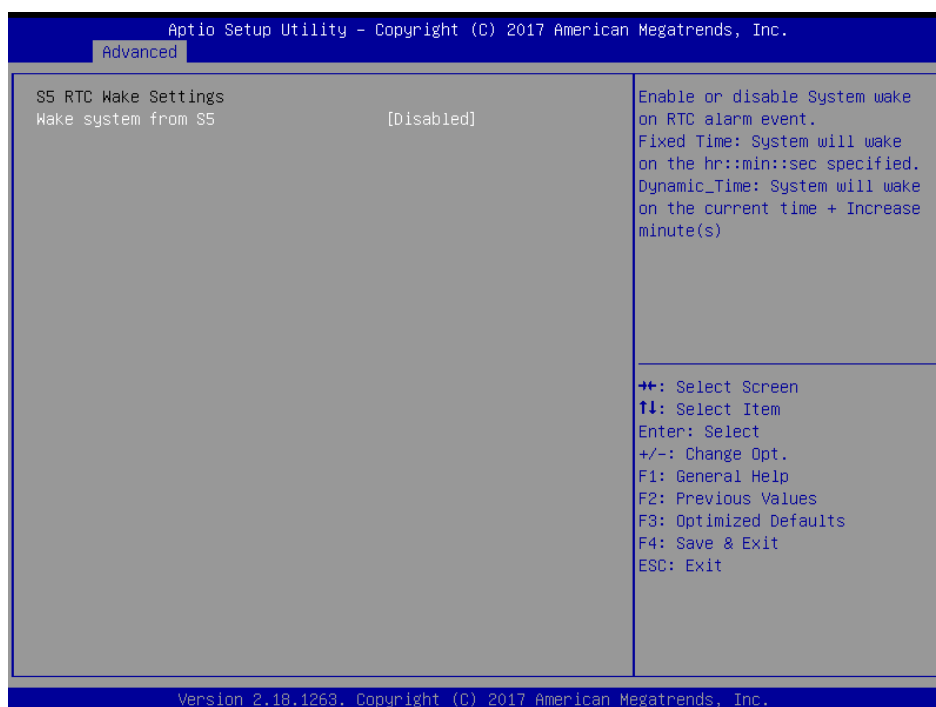


ERX-H110KP User's Manual

| Item | Options | Description |
|----------------------------|---|--|
| Wake system from S5 | Disabled [Default] , Fixed Time Dynamic Time | Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s). |

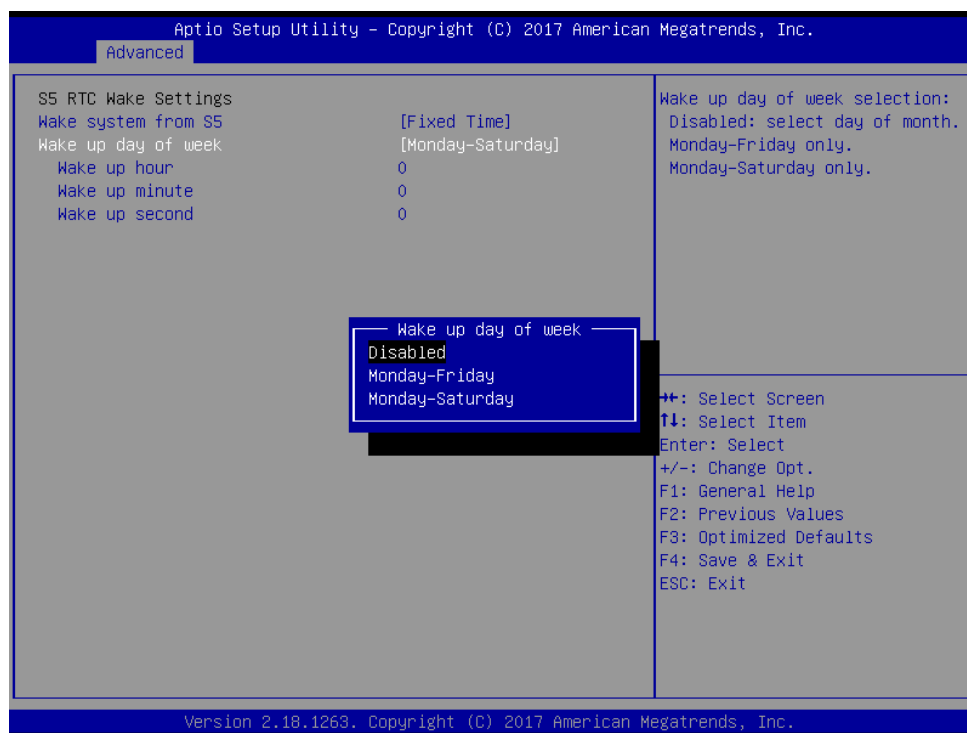


| Item | Options | Description |
|----------------------------|--|--|
| Wake system from S5 | Disabled, Fixed Time [Default] Dynamic Time | Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s). |
| Wake up day of week | Disabled, Monday-Friday Monday-Saturday [Default] | Wake up day of week selection: Disabled: select day of month. Monday-Friday only. Monday-Saturday only. |
| Wake up hour | 0-23 | Select 0-23 For example enter 3 for 3am and 15 for 3pm. |
| Wake up minute | 0-59 | 0-59. |
| Wake up second | 0-59 | 0-59. |

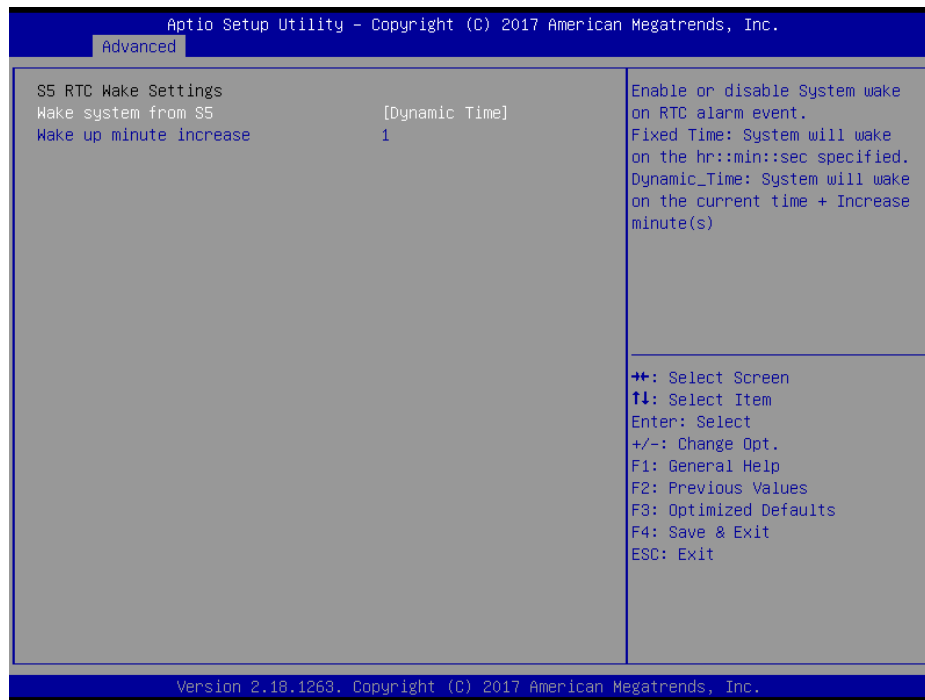

| Item | Options | Description |
|-------------------------|--|--|
| Wake system from S5 | Disabled, Fixed Time Dynamic Time[Default] | Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s). |
| Wake up minute increase | 1-5 | 1-5. |

3.6.2.5 Super IO Configuration


You can use this item to set up or change the Super IO configuration for serial ports. Please refer to 3.6.2.5.1~ 3.6.2.5.7 for more information.

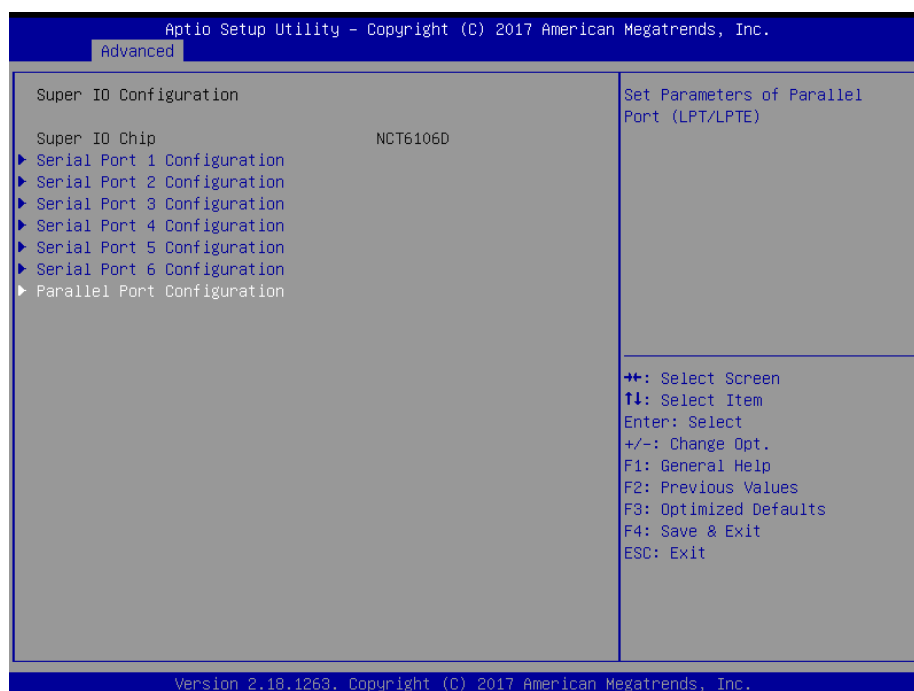

ERX-H110KP User's Manual


| Item | Description |
|------------------------------------|---|
| Serial Port 1 Configuration | Set Parameters of Serial Port 1 (COMA). |
| Serial Port 2 Configuration | Set Parameters of Serial Port 2 (COMB). |
| Serial Port 3 Configuration | Set Parameters of Serial Port 3 (COMC). |
| Serial Port 4 Configuration | Set Parameters of Serial Port 4 (COMD). |
| Serial Port 5 Configuration | Set Parameters of Serial Port 5 (COME). |
| Serial Port 6 Configuration | Set Parameters of Serial Port 6 (COMF). |
| Parallel Port Configuration | Set Parameters of Parallel Port (LPT/LPTE). |

3.6.2.5.1 Serial Port 1 Configuration

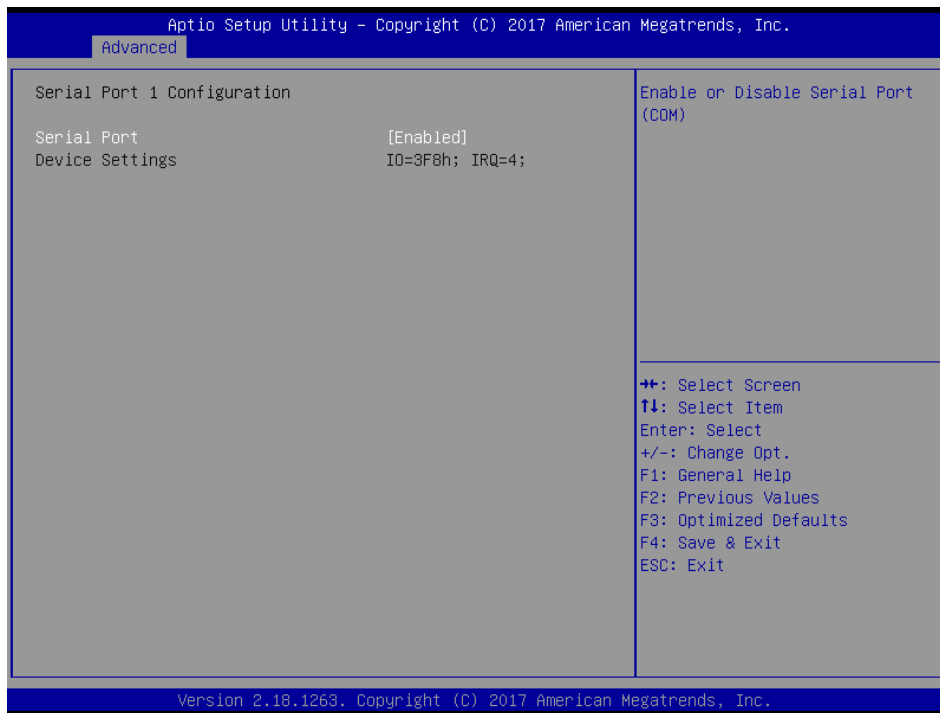

| Item | Option | Description |
|--------------------|--------------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled [Default] | Enable or Disable Serial Port (COM). |

3.6.2.5.2 Serial Port 2 Configuration

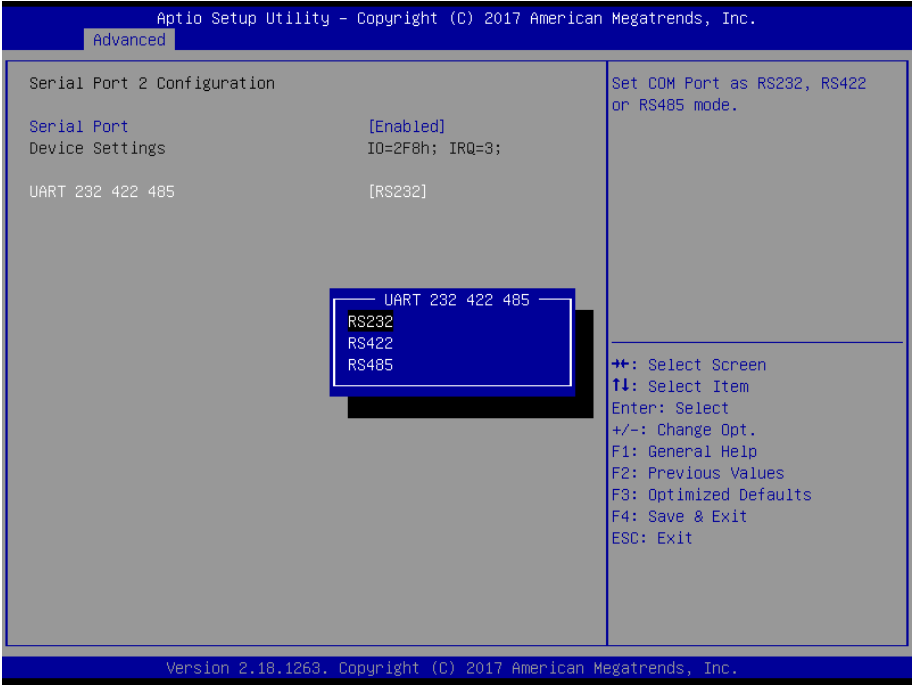

| Item | Option | Description |
|------------------|----------------------------------|---|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |
| UART 232 422 485 | RS232[Default] RS422 RS485 | Set COM Port as RS232, RS422 or RS485 mode. |


3.6.2.5.3 Serial Port 3 Configuration



ERX-H110KP User's Manual

| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.5.4 Serial Port 4 Configuration

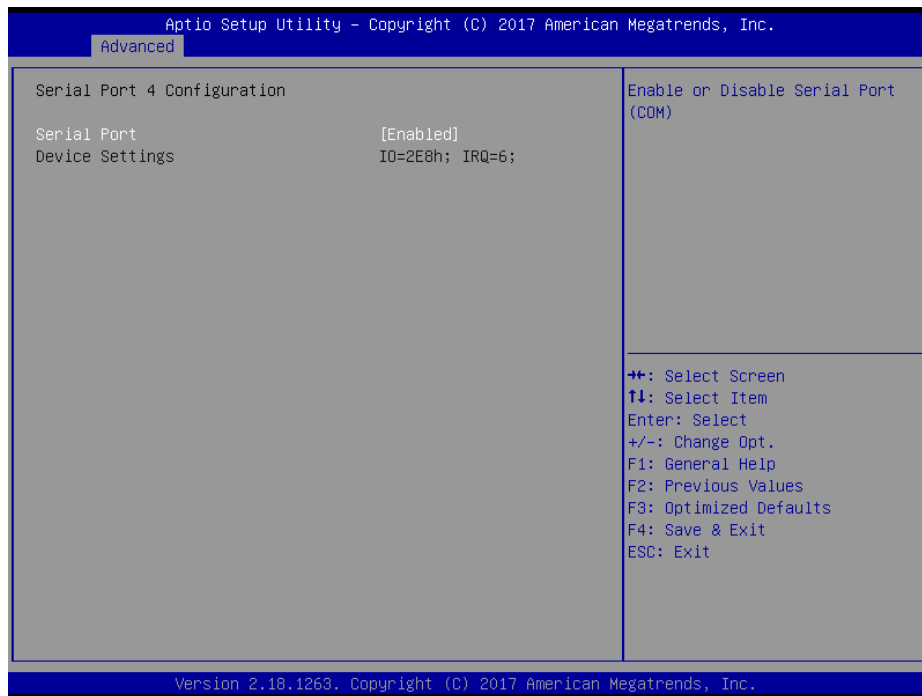

| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.5.5 Serial Port 5 Configuration




| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |

3.6.2.5.6 Serial Port 6 Configuration



| Item | Option | Description |
|-------------|-------------------------------|--------------------------------------|
| Serial Port | Disabled Enabled[Default], | Enable or Disable Serial Port (COM). |


3.6.2.5.7 Parallel Port Configuration

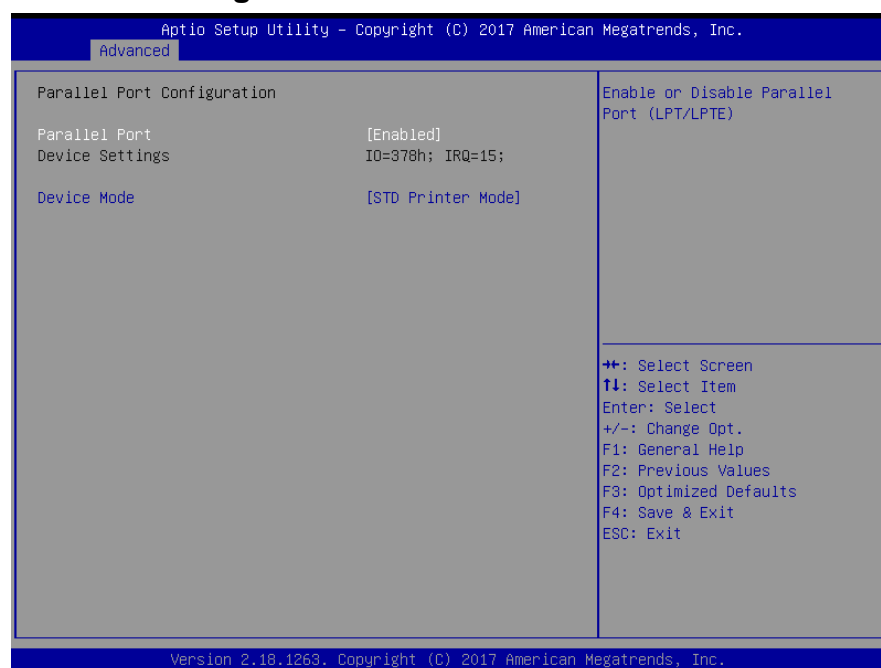


ERX-H110KP User's Manual

| Item | Option | Description |
|---------------|---|---|
| Parallel Port | Disabled Enabled[Default], | Enable or Disable Serial Port (LPT/LPTE). |
| Device Mode | STD Printer Mode[Default] SPP Mode EPP-1.9 and SPP Mode EPP-1.7 and SPP Mode | Change the Printer Port mode. |

3.6.2.6 NCT6106D H/W Monitor

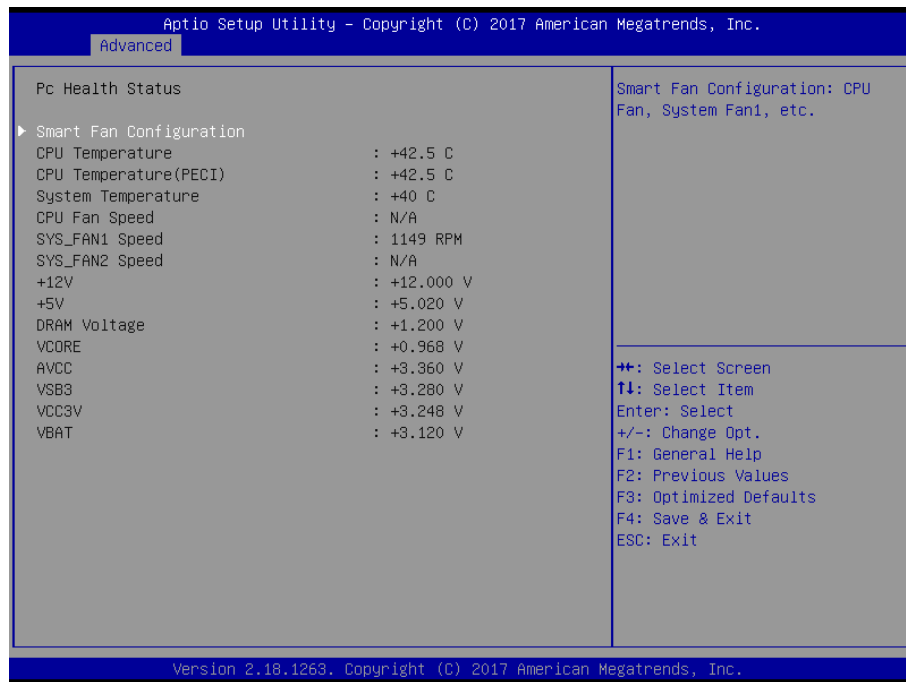


3.6.2.6.1 Smart Fan Configuration

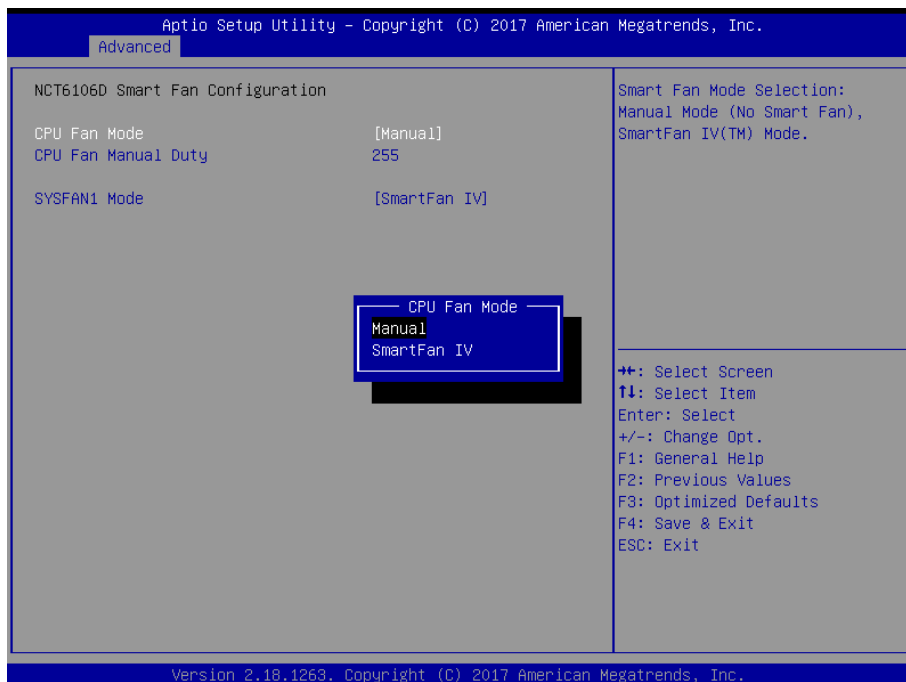


| Item | Option | Description |
|----------------------------|--|--|
| CPU Fan Mode | Manual [Default] , SmartFan IV | Smart Fan Mode Selection: Manual Mode (No Smart Fan), SmartFan IV™ Mode. |
| CPU Fan Manual Duty | 0-255 [Default] | CPU Fan manual output duty: 0 to 255. |
| SYSFAN1 Mode | Manual SmartFan IV [Default] , | Smart Fan Mode Selection: Manual Mode (No Smart Fan), SmartFan IV™ Mode. |

3.6.2.7 Serial Port Console Redirection

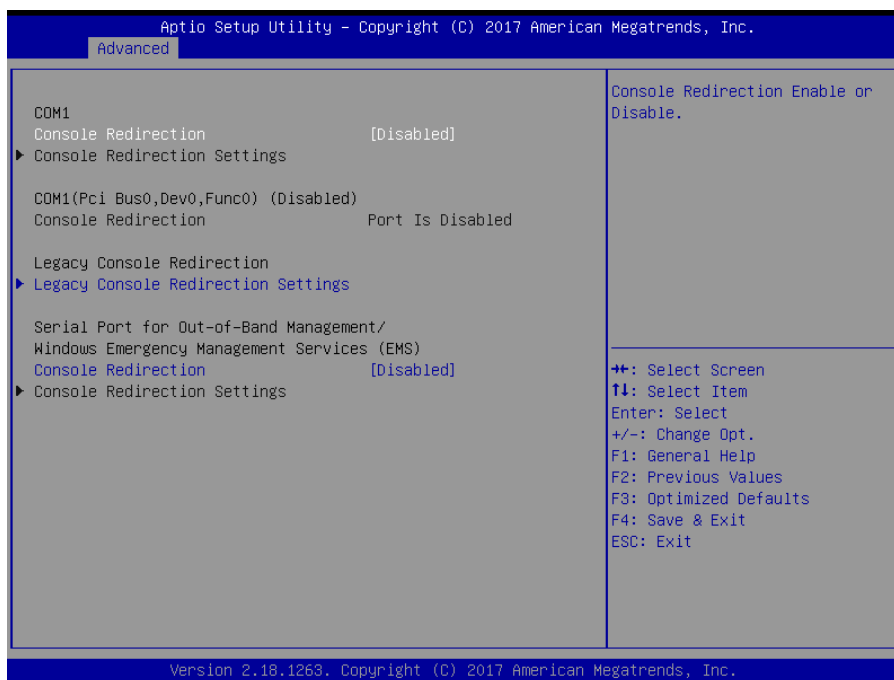

| Item | Options | Description |
|----------------------------|--|--|
| Console Redirection | Disabled [Default] , Enabled | Console Redirection Enable or Disable. |


3.6.2.7.1 COM1

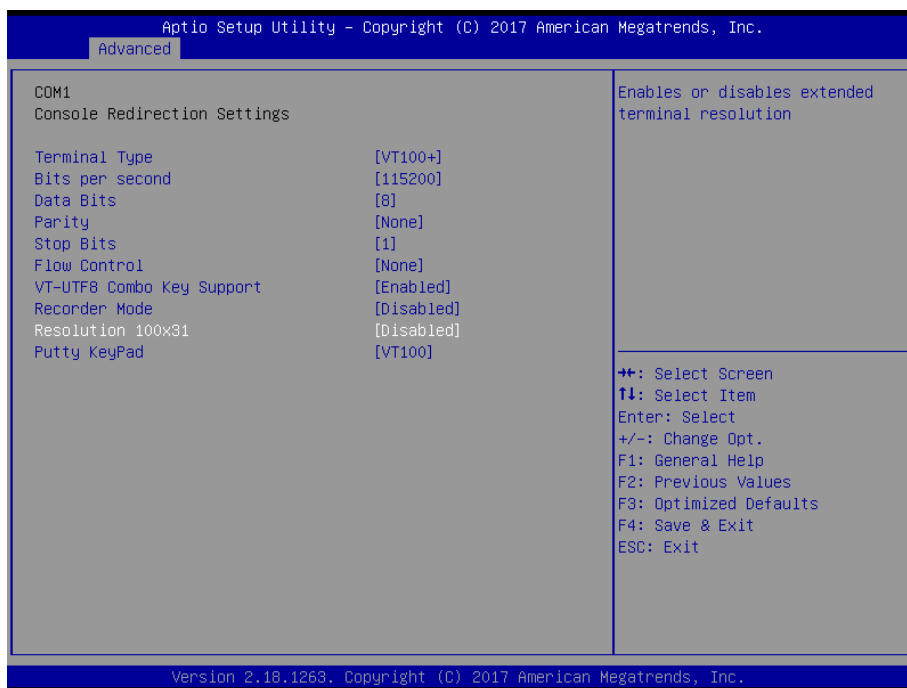


| Item | Option | Description |
|------------------------|--|--|
| Terminal Type | VT100 VT100+[Default] VT-UTF8 ANSI | Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes. |
| Bits per second | 9600 19200 38400 57600 115200[Default] | Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds. |
| Data Bits | 7 8[Default] | Data Bits. |
| Parity | None[Default] Even Odd Mark Space | A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit. |
| Stop Bits | 1[Default] 2 | Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit. |

| | | |
|----------------------------------|---|---|
| Flow Control | None[Default] Hardware RTS/CTS | Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals. |
| VT-UTF8 Combo Key Support | Disabled Enabled[Default] | Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals. |
| Recorder Mode | Disabled[Default] Enabled | With this mode enabled only text will be sent. This is to capture Terminal data. |
| Resolution 100x31 | Disabled[Default] Enabled | Enables or disables extended terminal resolution. |
| Putty KeyPad | VT100[Default] LINUX XTERM6 SCO ESCN VT400 | Select FunctionKey and KeyPad on Putty. |

3.6.2.8 Intel TXT Configuration

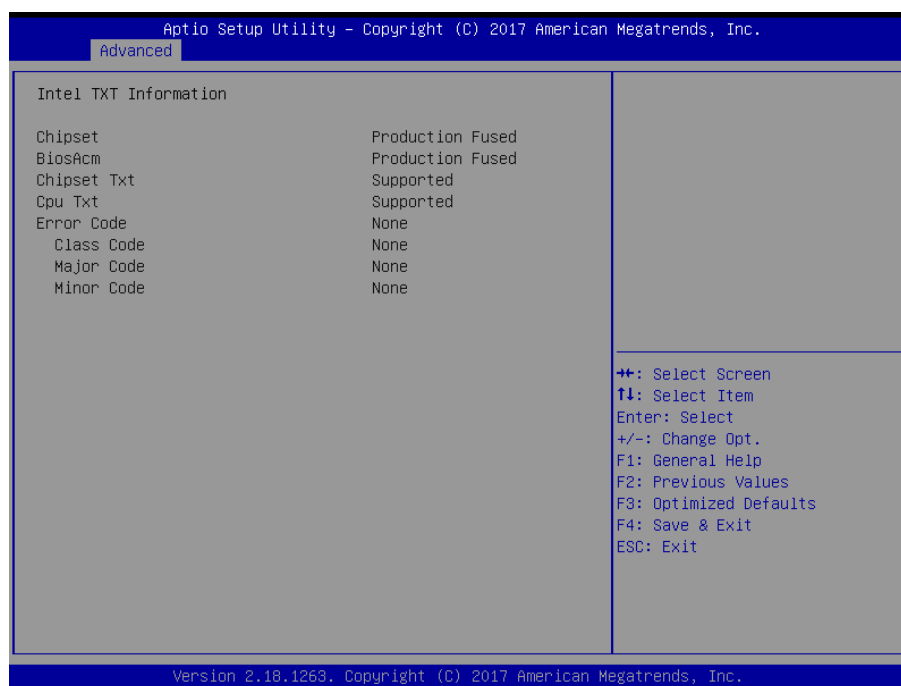


3.6.2.9 Network Stack Configuration

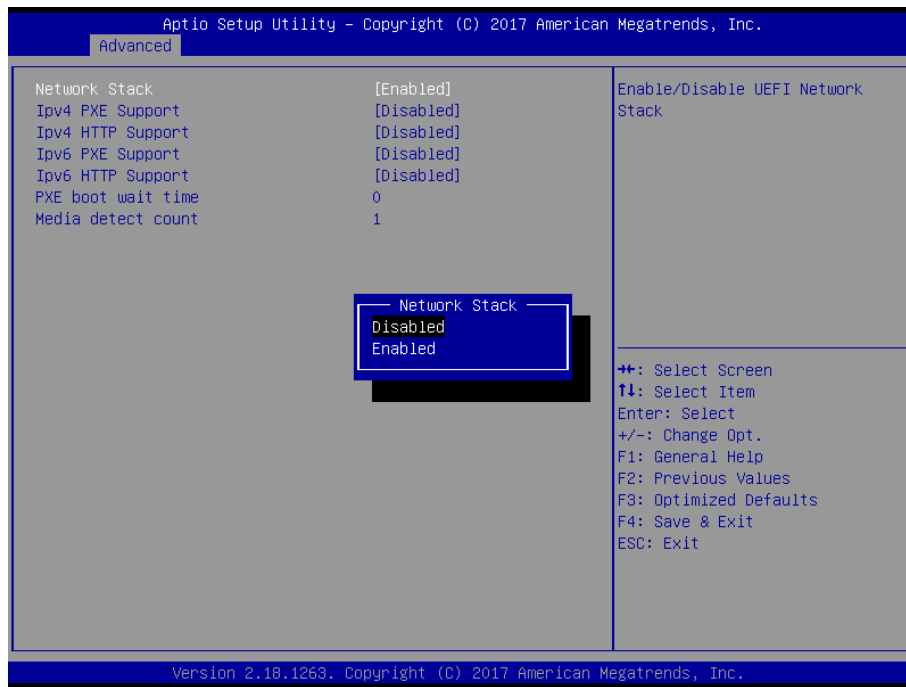

| Item | Options | Description |
|---------------------------|--------------------------------------|---|
| Network Stack | Disabled Enabled [Default] | Enable/Disable UEFI Network Stack. |
| Ipv4 PXE Support | Disabled [Default] Enabled | Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available. |
| Ipv4 HTTP Support | Disabled [Default] Enabled | Enable/Disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available. |
| Ipv6 PXE Support | Disabled [Default] Enabled | Enable/Disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available. |
| Ipv6 HTTP Support | Disabled [Default] Enabled | Enable/Disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available. |
| PXE boot wait time | 0 | Wait time to press ESC key to abort the PXE boot. |
| Media detect count | 1 | Number of times presence of media will be checked. |

3.6.2.10 CSM Configuration


BIOS Default:

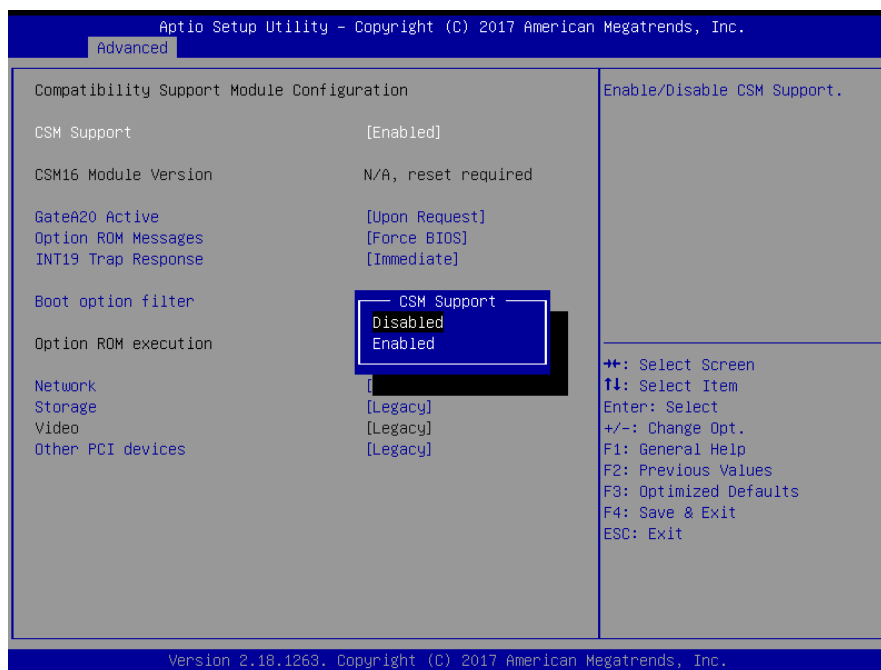

| Item | Options | Description |
|----------------------------|--|--|
| CSM Support | Disabled[Default] Enabled | Enable/Disable CSM Support. |
| GateA20 Active | Upon Request[Default] Always | UPON REQUEST – GA20 can be disabled using BIOS services. ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB. |
| Option ROM Messages | Force BIOS[Default] Keep Current | Set display mode for Option ROM. |
| INT19 Trap Response | Immediate[Default] Postponed | BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE – execute the trap right away; POSTPONED – execute the trap during legacy boot. |
| Boot option filter | Legacy only[Default] UEFI only | This option controls Legacy/UEFI ROMs priority. |
| Network | Do not launch[Default] UEFI Legacy | Controls the execution of UEFI and Legacy PXE OpROM. |
| Storage | Do not launch UEFI Legacy[Default] | Controls the execution of UEFI and Legacy Storage OpROM. |
| Other PCI devices | Do not launch UEFI Legacy[Default] | Determines OpROM execution policy for devices other than Network, Storage, or Video. |

If enable CSM Support:


ERX-H110KP User's Manual

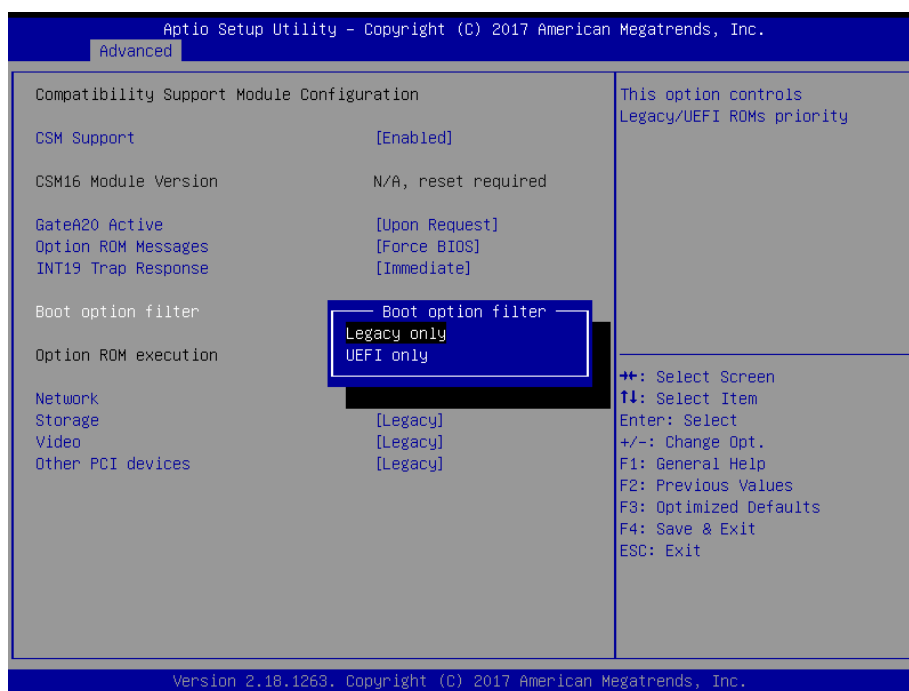

| Item | Options | Description |
|----------------------------|--|--|
| CSM Support | Disabled Enabled[Default] | Enable/Disable CSM Support. |
| GateA20 Active | Upon Request[Default] Always | UPON REQUEST – GA20 can be disabled using BIOS services. ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB. |
| Option ROM Messages | Force BIOS[Default] Keep Current | Set display mode for Option ROM. |
| INT19 Trap Response | Immediate[Default] Postponed | BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE – execute the trap right away; POSTPONED – execute the trap during legacy boot. |
| Boot option filter | Legacy only[Default] UEFI only | This option controls Legacy/UEFI ROMs priority. |
| Network | Do not launch UEFI Legacy[Default] | Controls the execution of UEFI and Legacy PXE OpROM. |
| Storage | Do not launch UEFI Legacy[Default] | Controls the execution of UEFI and Legacy Storage OpROM. |
| Other PCI devices | Do not launch UEFI Legacy[Default] | Determines OpROM execution policy for devices other than Network, Storage, or Video. |


3.6.2.11 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

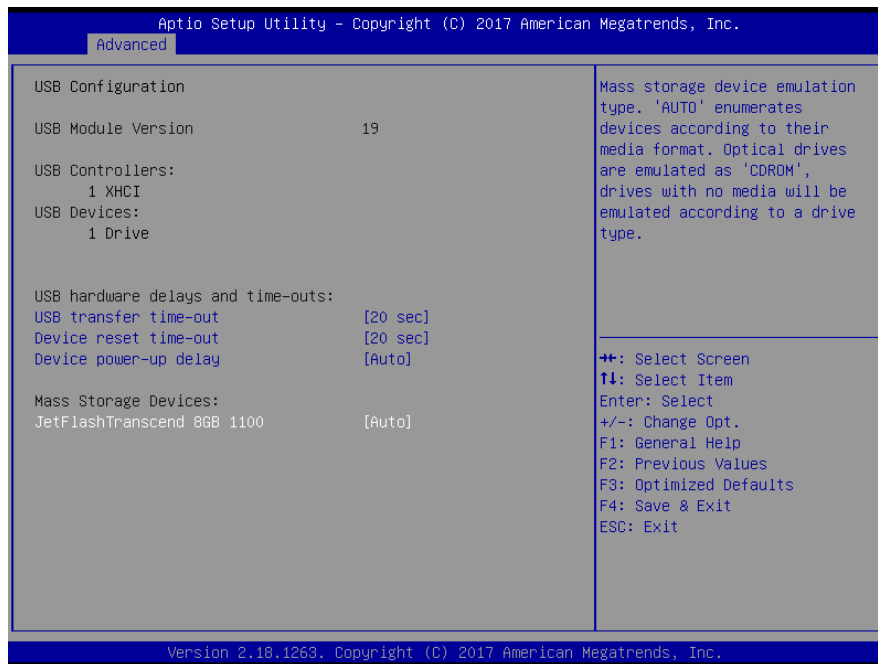


| Item | Options | Description |
|-----------------------|--|--|
| USB transfer time-out | 1 sec 5 sec 10 sec 20 sec[Default] | The time-out value for Control, Bulk, and Interrupt transfers. |
| Device reset time-out | 10 sec 20 sec[Default] 30 sec 40 sec | USB mass storage device Start Unit command time-out. |
| Device power-up delay | Auto[Default] Manual | Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken form Hub descriptor. |
| Mass Storage Devices | Auto[Default] Floppy Forced FDD Hard Disk CD-ROM | Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type. |

3.6.3 Chipset

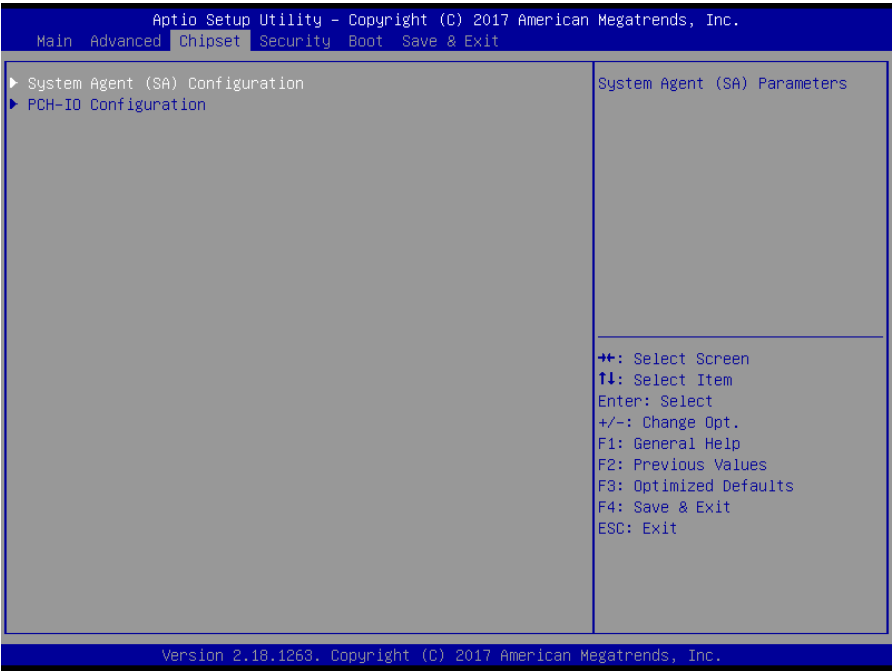


3.6.3.1 System Agent (SA) Configuration

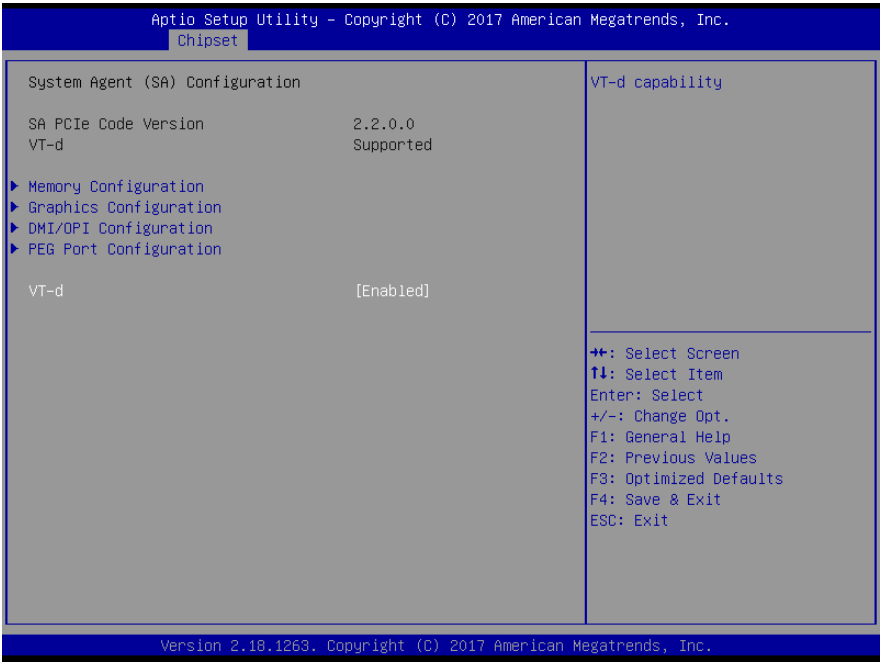


| Item | Option | Description |
|------|--------------------------------------|------------------|
| VT-d | Enabled [Default] Disabled | VT-d capability. |

3.6.3.1.1 Graphics Configuration

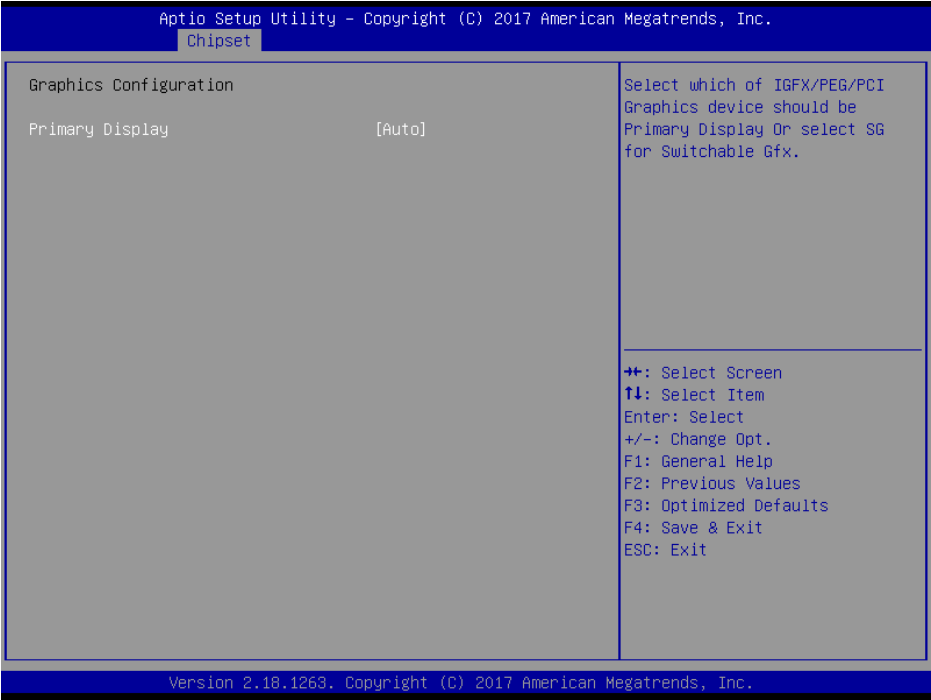


| Item | Option | Description |
|-----------------|-------------------------------------|---|
| Primary Display | Auto[Default] IGFX PEG PCI | Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx. |

3.6.3.1.2 DMI/OPI Configuration

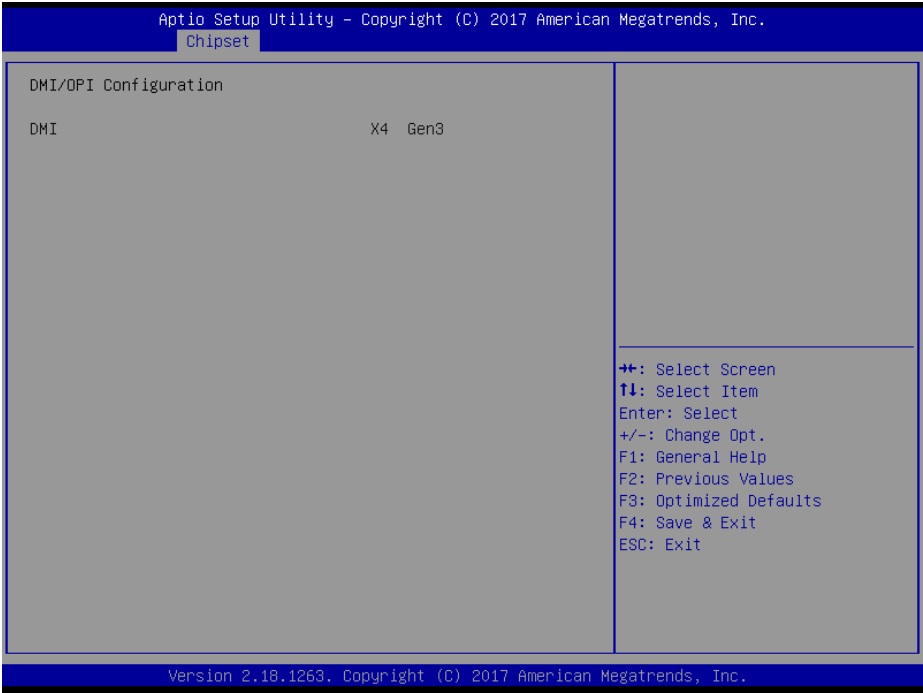

3.6.3.1.3 PEG Port Configuration

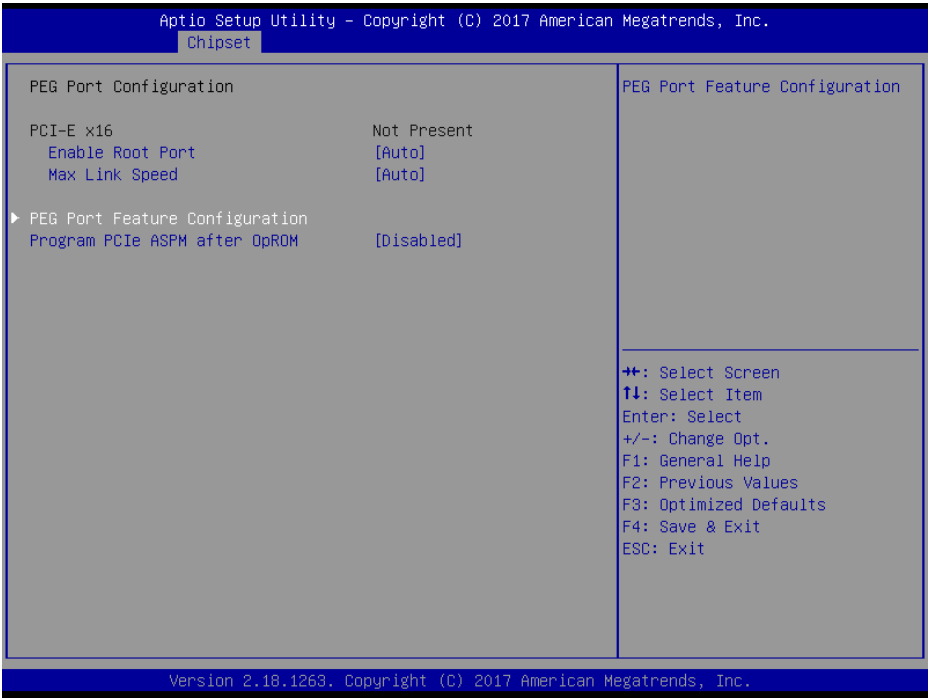


| Item | Option | Description |
|-------------------------------|---------------------------------------|---|
| Enable Root Port | Disabled Enabled Auto[Default] | Enable or Disable the Root Port. |
| Max Link Speed | Auto[Default] Gen1 Gen2 Gen3 | Configure PEG 0:1:0 Max Speed. |
| Program PCIe ASPM after OpROM | Disabled[Default] Enabled | Enabled: PCIe ASPM will be programmed after OpROM. Disabled: PCIe ASPM will be programmed before OpROM. |

3.6.3.1.3.1 PEG Port Feature Configuration




| Item | Option | Description |
|------------------------------|-------------------------------|--|
| Detect Non-Compliance Device | Disabled[Default] Enabled, | Detect Non-Compliance PCI Express Device in PEG. |

3.6.3.1.4 Memory Configuration

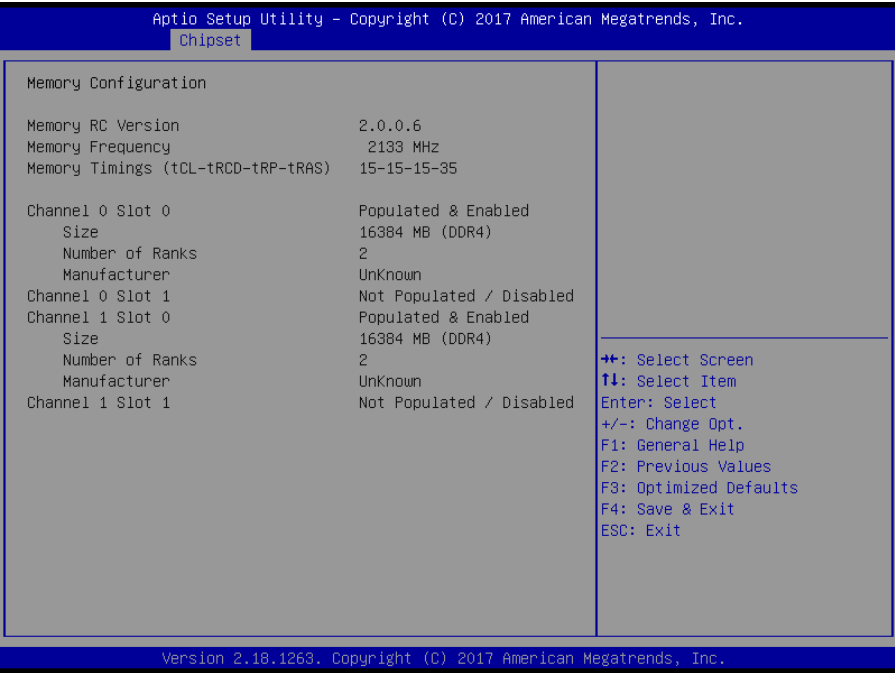


3.6.3.2 PCH-IO Configuration

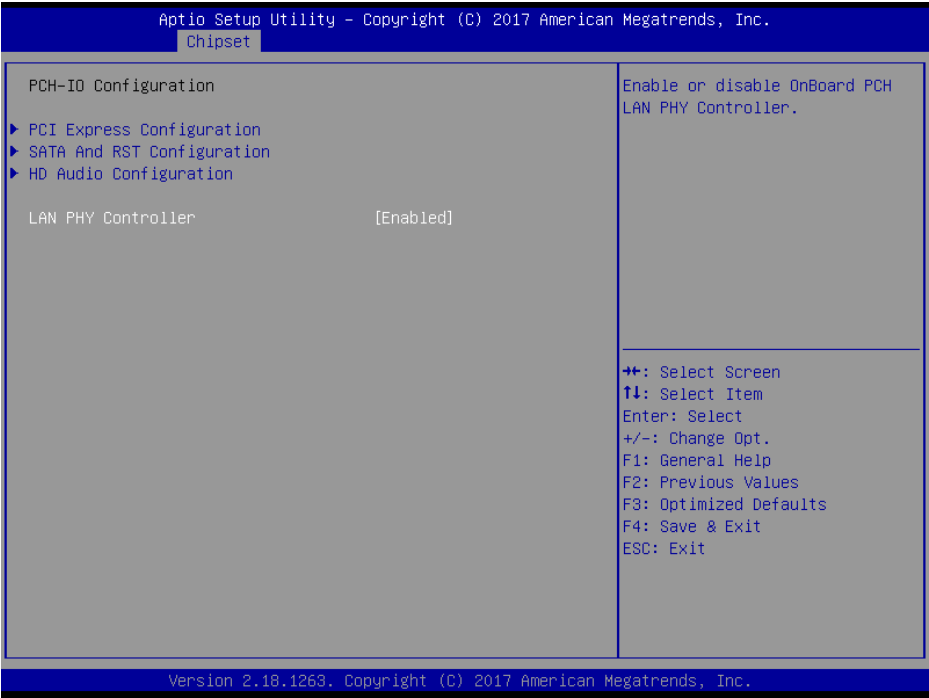



| Item | Option | Description |
|--------------------|--------------------------------------|---|
| LAN PHY Controller | Disabled Enabled [Default] | Enable or disable OnBoard PCH LAN PHY Controller. |

3.6.3.2.1 HD Audio Configuration

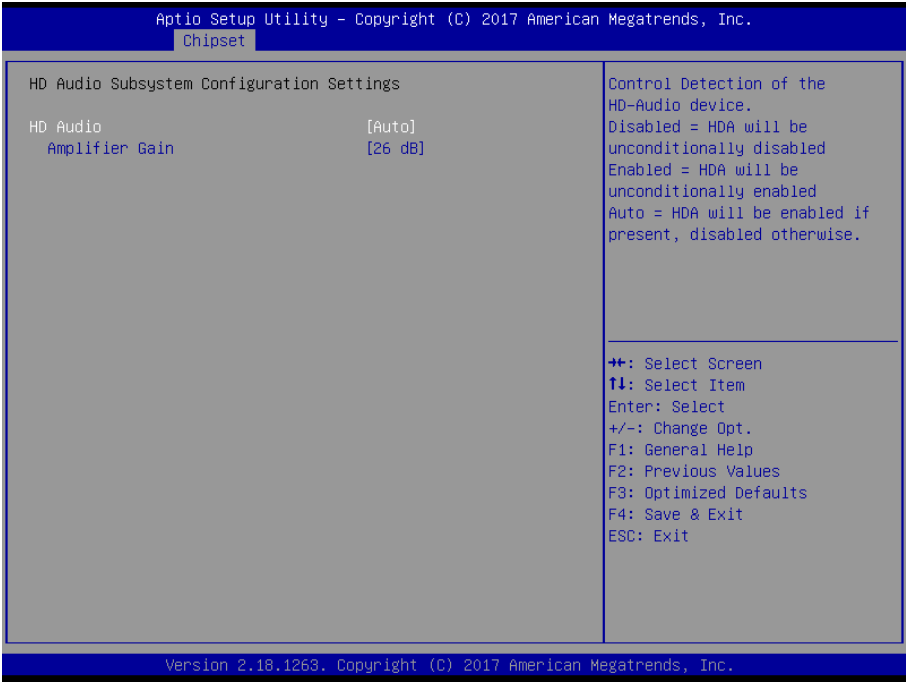

| Item | Option | Description |
|----------------|---|---|
| HD Audio | Disabled Enabled Auto[Default], | Control Detection of the HD-Audio device. Disable = HAD will be unconditionally disabled Enabled = HAD will be unconditionally enabled Auto = HAD will be enabled if present, disabled otherwise. |
| Amplifier Gain | 20 dB 26 dB[Default] 32 dB 36 dB | Select Amplifier Gain(dB). |


3.6.3.2.2 SATA And RST Configuration

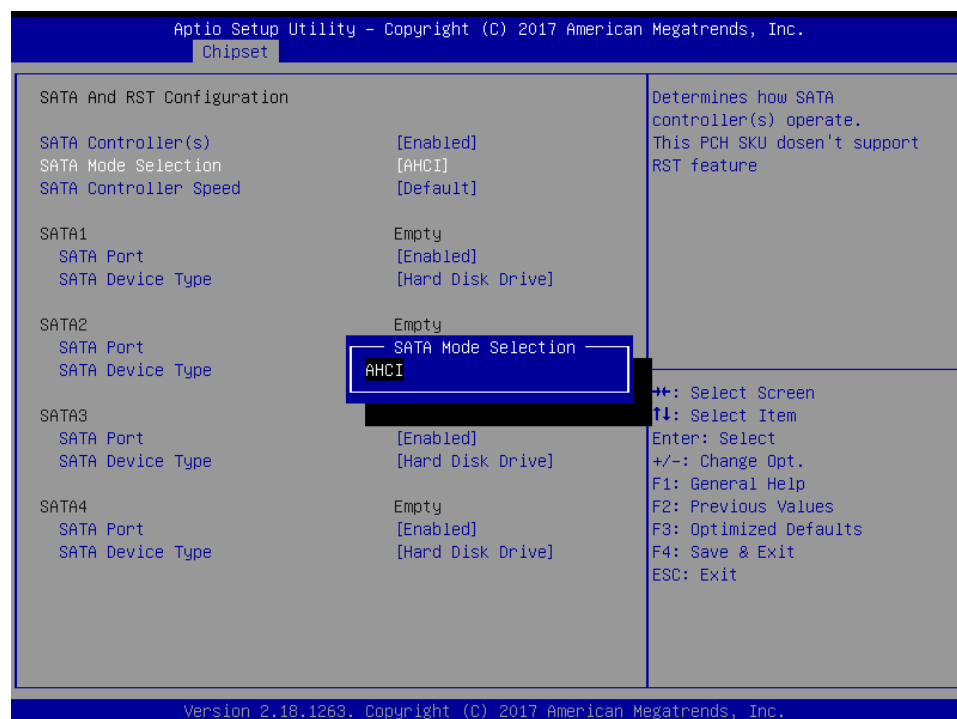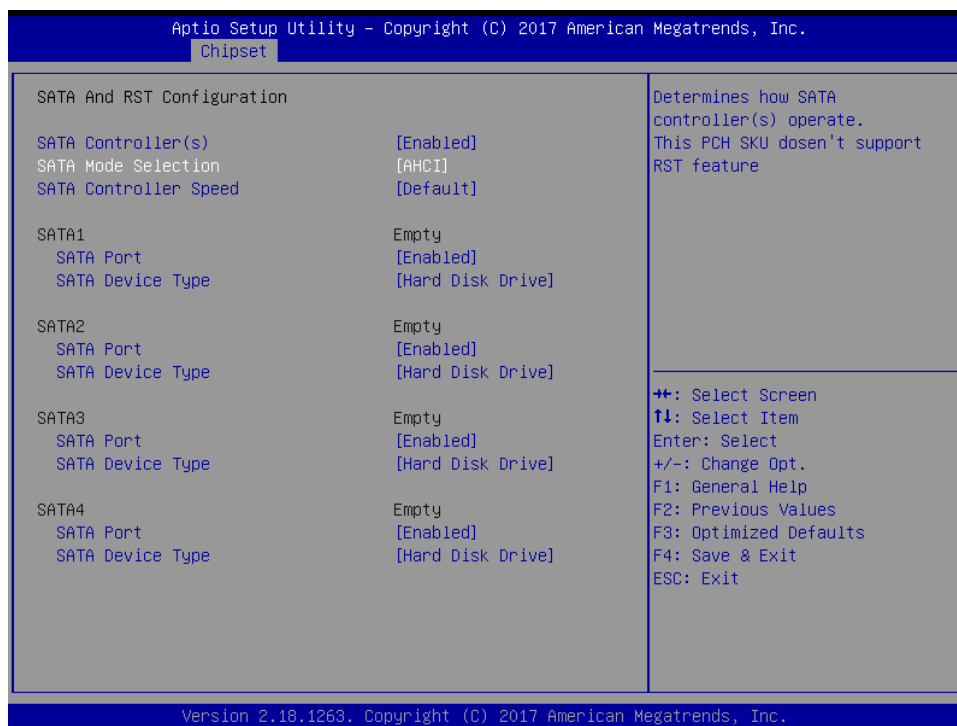

ERX-H110KP User's Manual

| Item | Option | Description |
|-----------------------|--|--|
| SATA Controller(s) | Enabled[Default], Disabled | Enable/Disable SATA Device. |
| SATA Mode Selection | AHCI[Default] | Determines how SATA controller(s) operate. |
| SATA Controller Speed | Default[Default] Gen1 Gen2 Gen3 | Indicates the maximum speed the SATA controller can support. |
| SATA Port | Enabled[Default], Disabled | Enable or Disable SATA Port. |
| SATA Device Type | Hard Disk Drive[Default], Solid State Drive | Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. |

3.6.4 Security

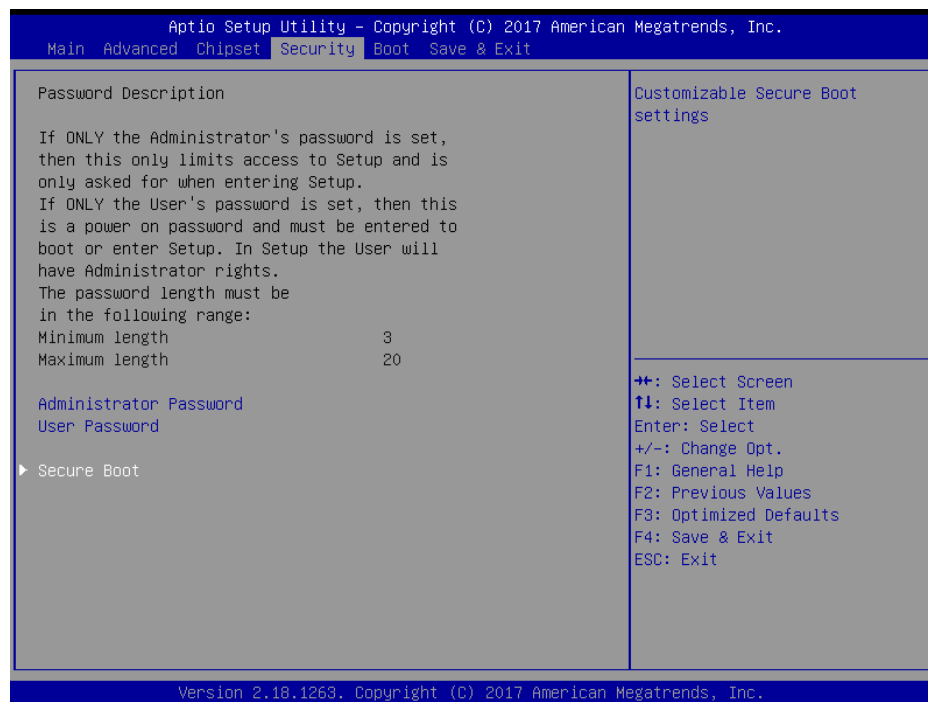


- **Administrator Password**

Set setup Administrator Password

- **User Password**


Set User Password

3.6.4.1 Secure Boot menu

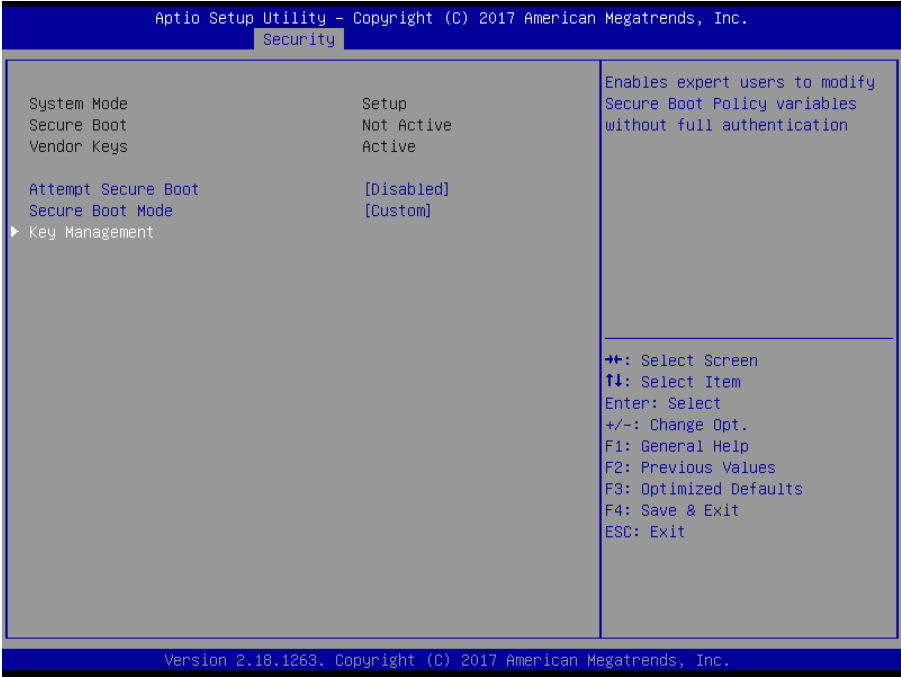


| Item | Option | Description |
|---------------------|------------------------------|--|
| Attempt Secure Boot | Disabled[Default] Enabled | Secure Boot can be enabled if 1.System running in User mode with enrolled Platform Key(PK) 2.CSM function is disabled. |
| Secure Boot Mode | Standard Custom[Default] | Secure Boot mode selector. 'Custom' Mode enables users to change Image Execution policy and manage Secure Boot Keys. |

3.6.4.1.1 Key Management

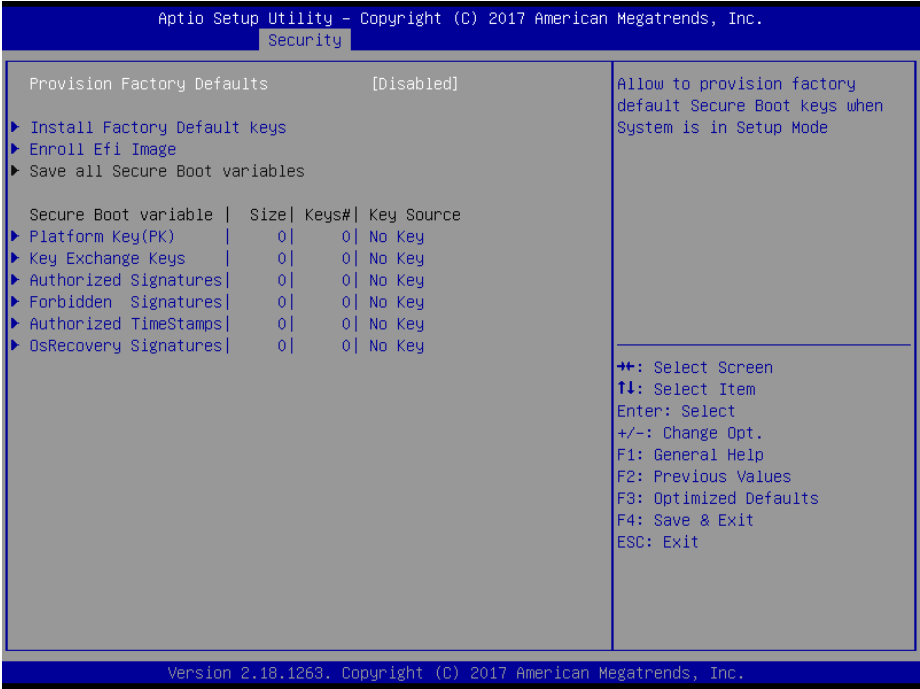


| Item | Option | Description |
|---------------------------|-------------------------------|---|
| Provision Factory Default | Enabled, Disabled[Default] | Allow to provision factory default Secure Boot keys when System is in Setup Mode. |

3.6.5 Boot

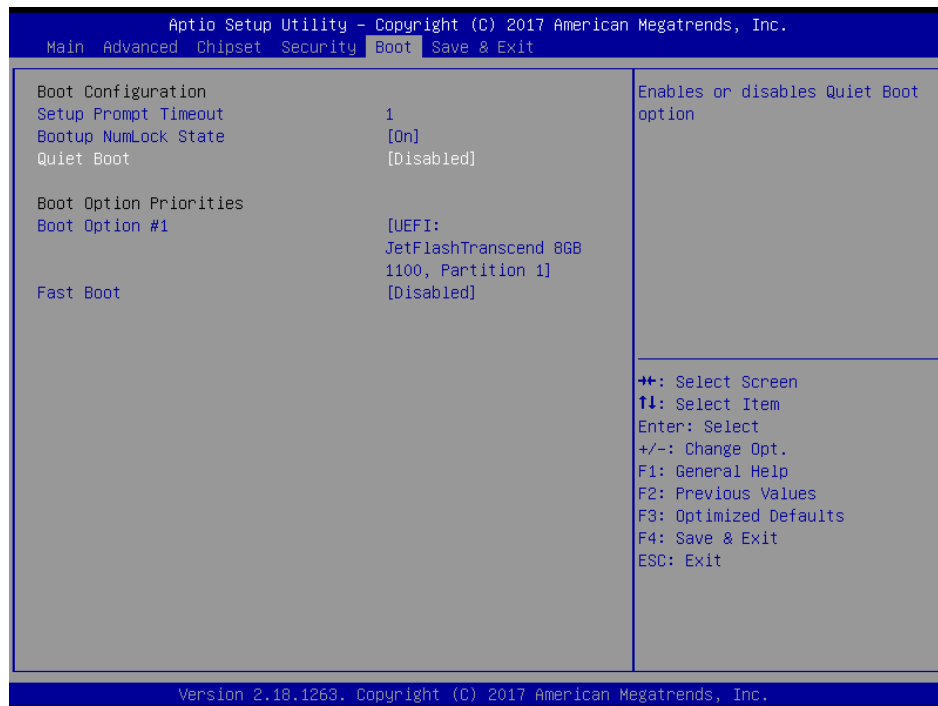

| Item | Option | Description |
|----------------------|------------------------------|---|
| Setup Prompt Timeout | 1 ~ 65535 | Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting. |
| Bootup NumLock State | On[Default] Off | Select the Keyboard NumLock state |
| Quiet Boot | Disabled[Default] Enabled | Enables or disables Quiet Boot option |
| Fast Boot | Disabled[Default] Enabled | Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options. |
| Boot Option #1 | Set the system boot order. | |

3.6.6 Save and exit

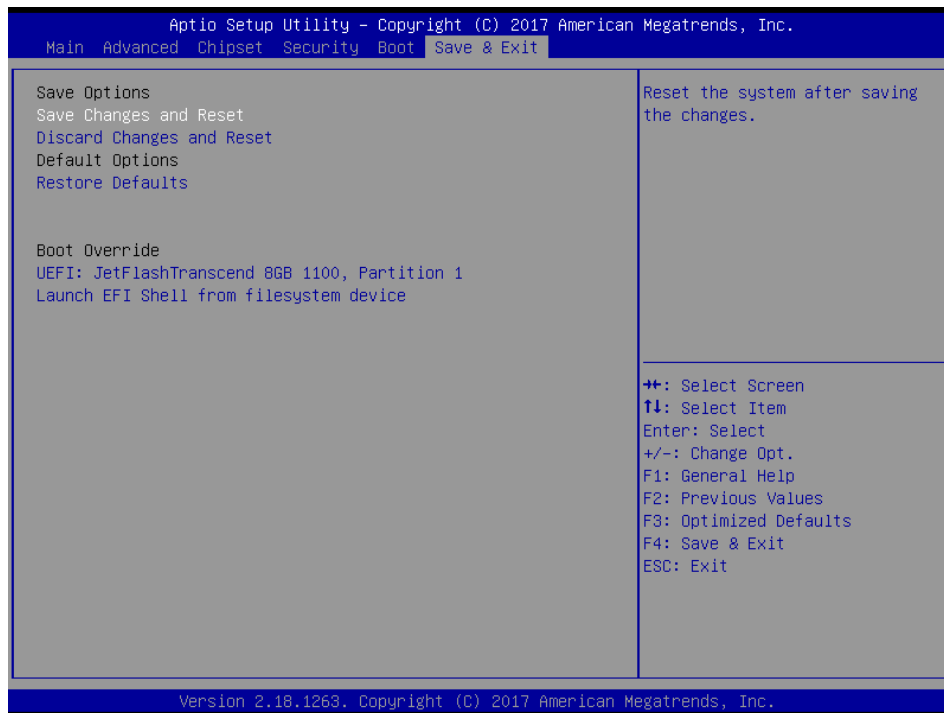

3.6.6.1 *Save Changes and Reset*

Reset the system after saving the changes.

3.6.6.2 *Discard Changes and Reset*

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

3.6.6.3 *Restore Defaults*

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

3.6.6.4 *Launch EFI Shell from filesystem device*

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

4. Drivers Installation




Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

4.1 Install Chipset Driver

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

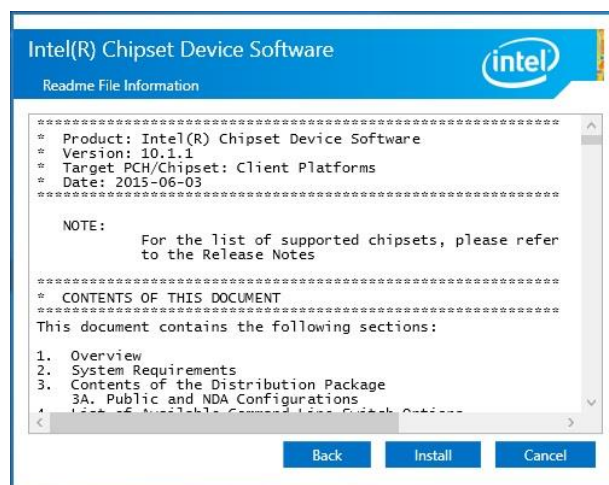

Step 3. Click Install.



Step1. Click Next.

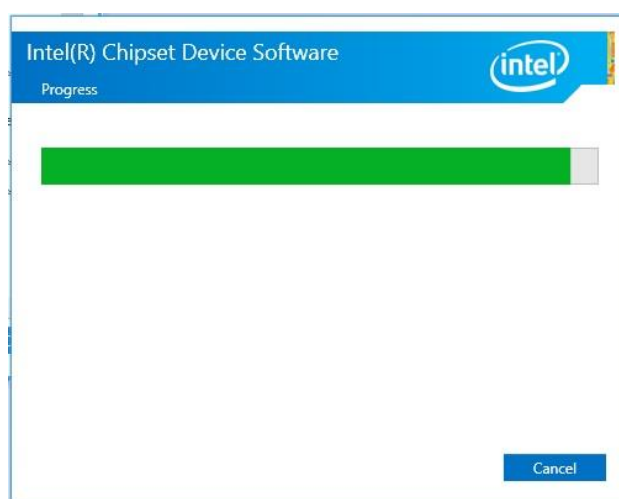

Step 4. Installing.



Step 2. Click Accept.




Step 5. Complete setup.

4.2 Install VGA Driver


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

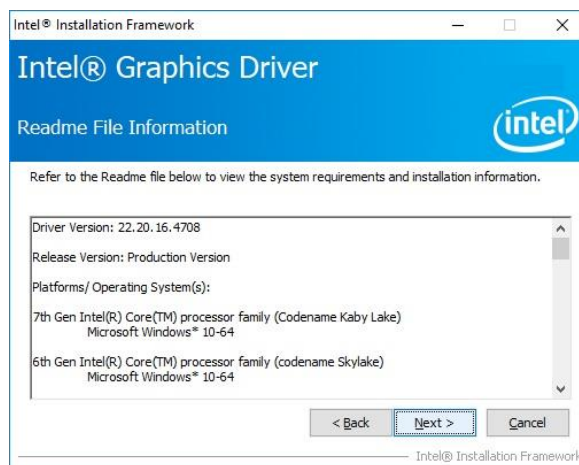


Step 3. Click Next.

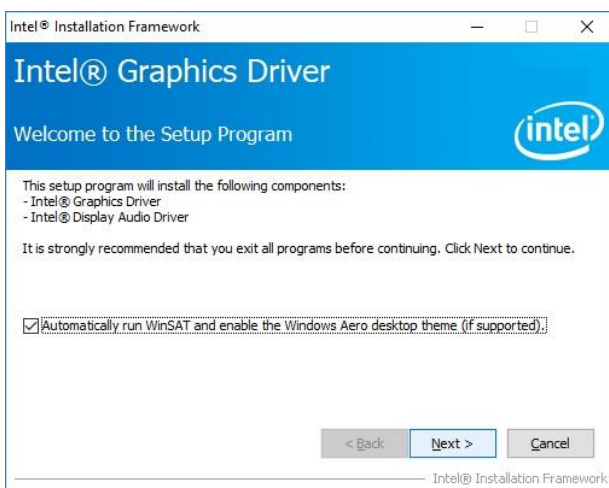

Step 1. Click Next to continue installation.

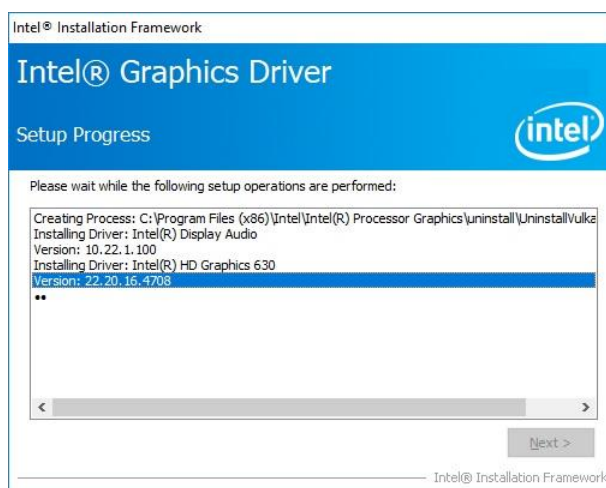


Step 4. Click Next.

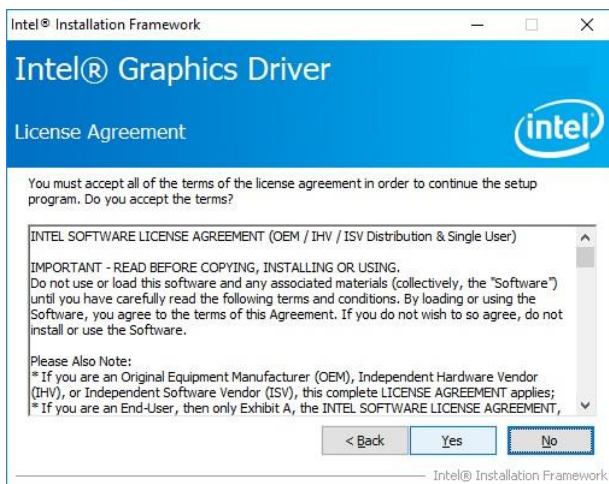


Step 2.

Click **Yes** to accept license agreement.

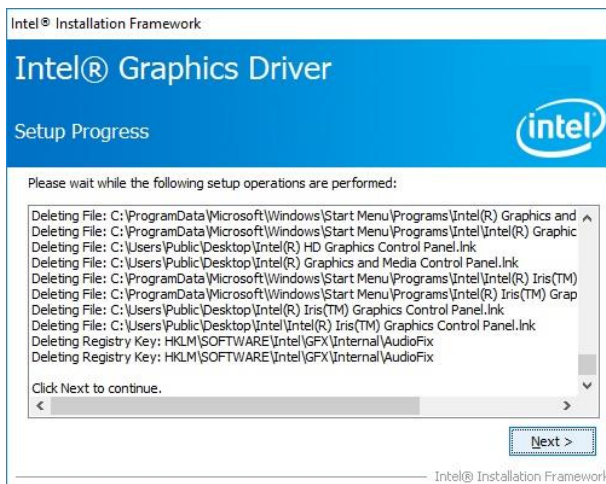

Step 5. Click Next.

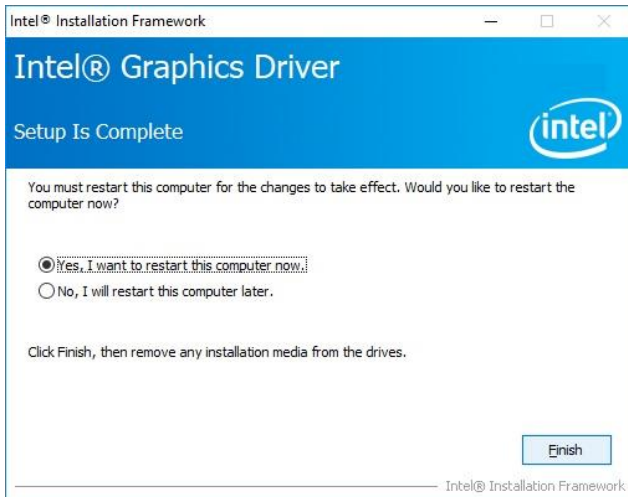


Step 6. Click **Finish** to complete setup.

4.3 Install ME Driver

Insert the Supporting CD-ROM to CD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

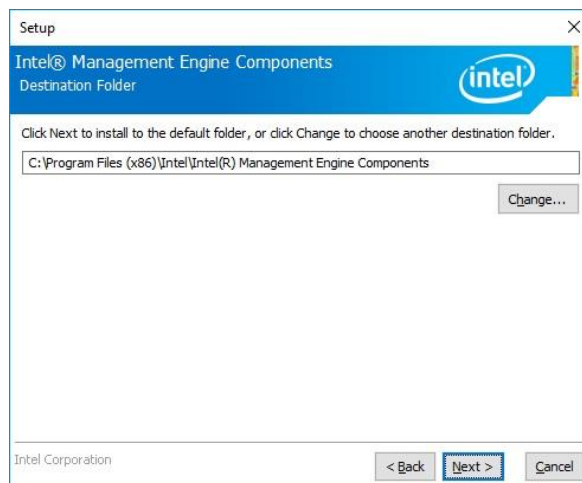


Step 3. Click Next




Step 1. Click Next to continue setup.

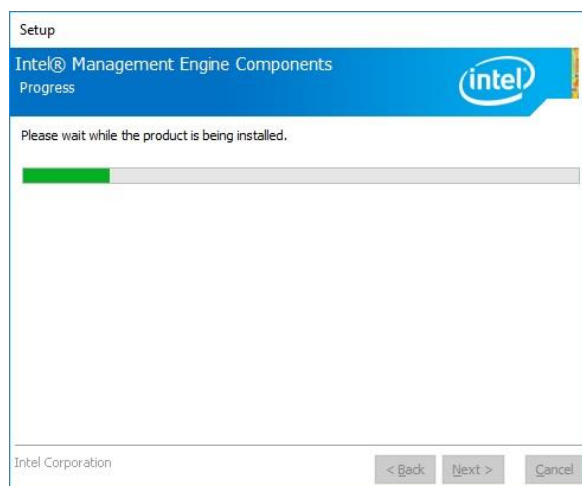

Step 4. Installing.

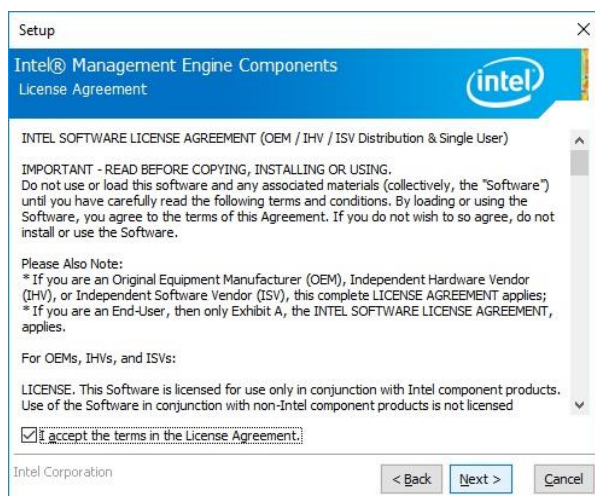

Step 2. Click Next.

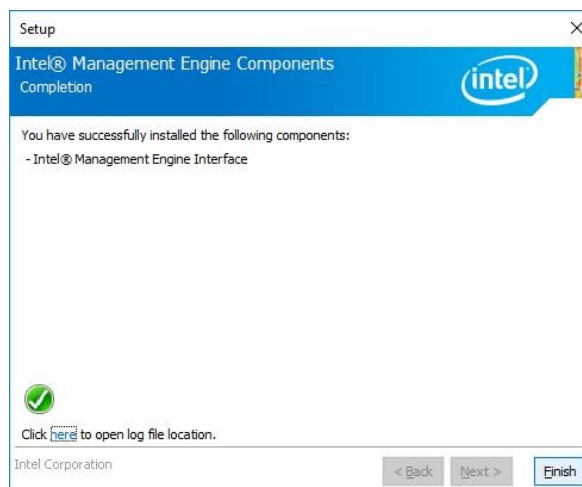


Step 5. Click Finish to complete the setup

4.4 Install Audio Driver (For Realtek ALC892 HD Audio)


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

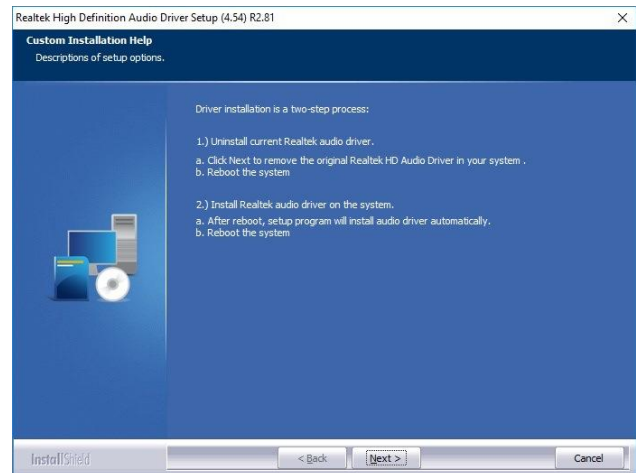


Step 3. Click Next.

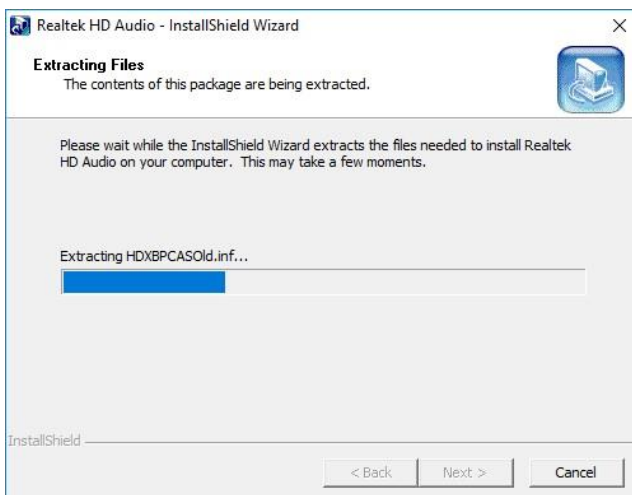


Step1. Click Next to Install.

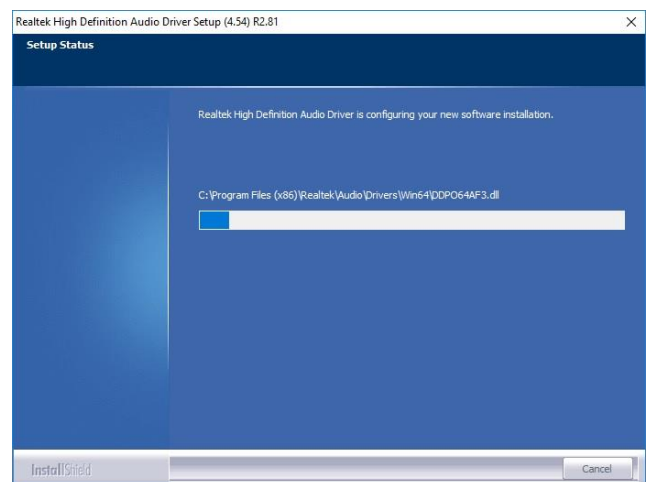

Step 4. Installing.

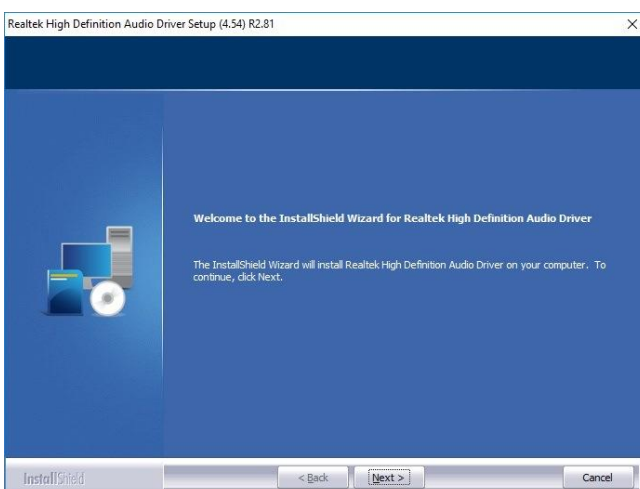

Step2. Click Next.

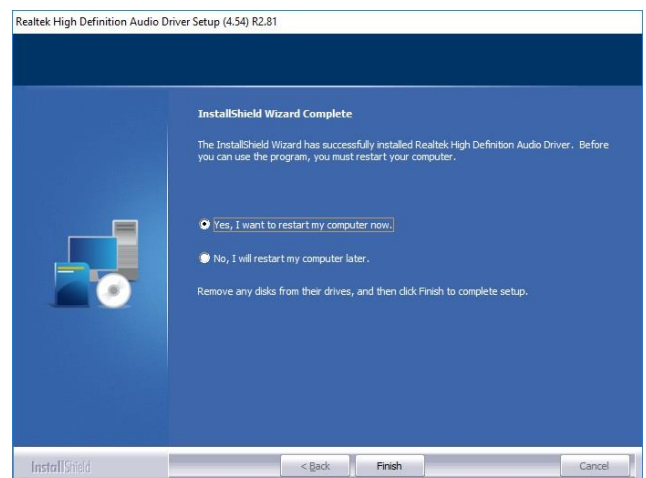


Step 5. Click Finish to complete the setup

4.5 Install LAN Driver


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

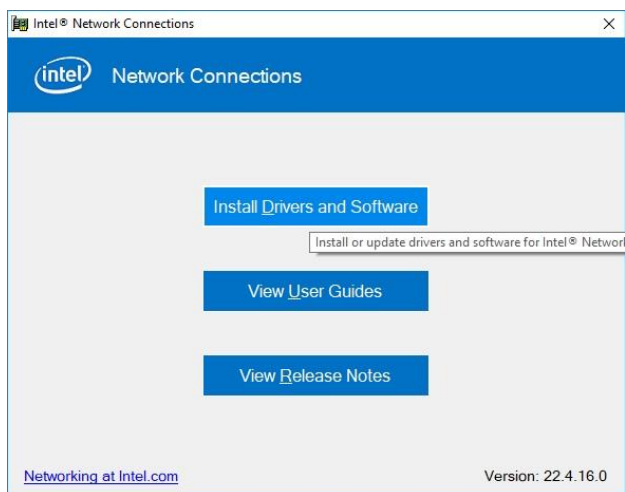


Step 1. Click Install Drivers and Software.

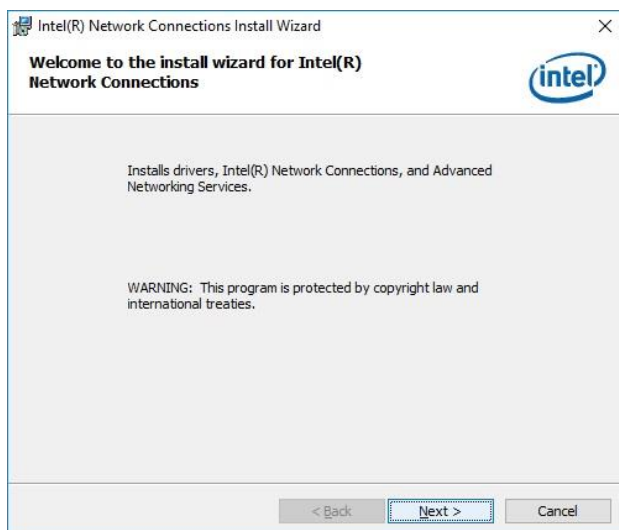


Step 2. Click Next.

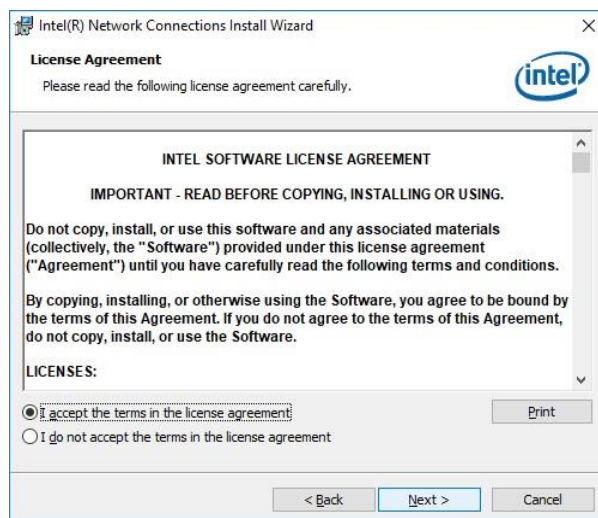


Step 3. Click Next.

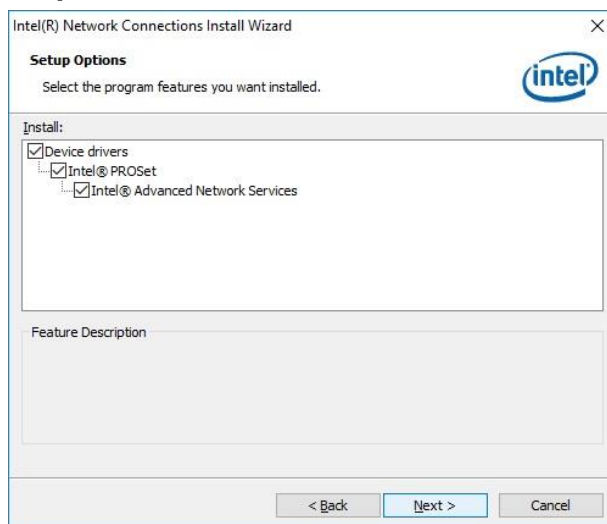


Step 4. Click Next.

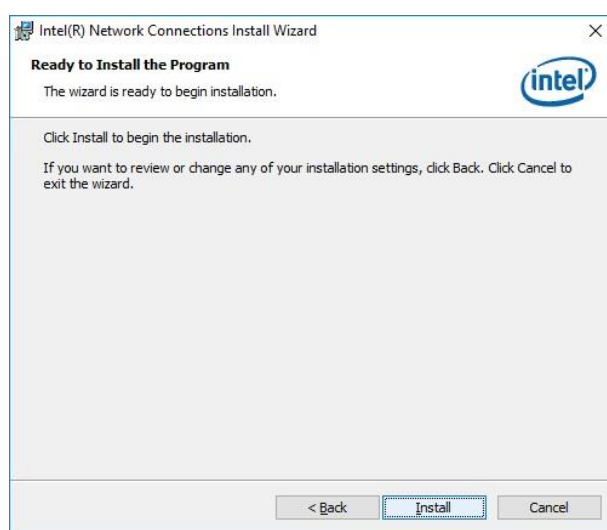

Step 5. Click Install.

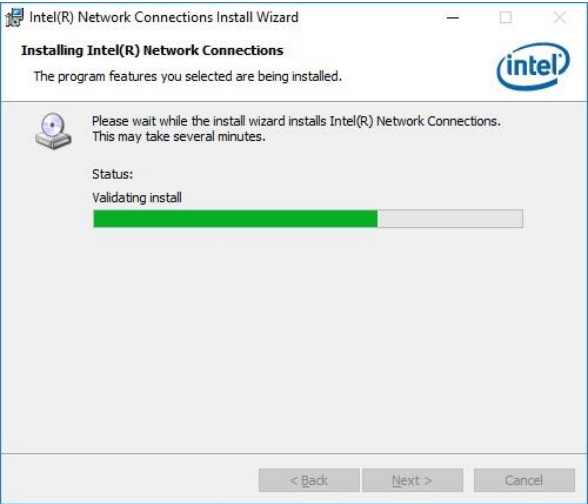

Step 6. Installing.

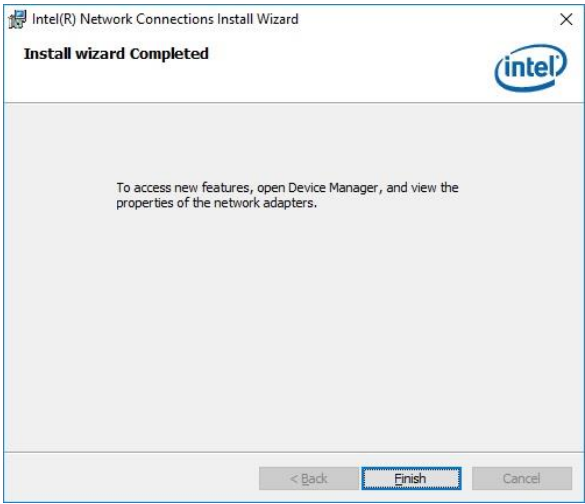


Step 7. Click **Finish** to complete setup.

4.6 Install IRST Driver


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

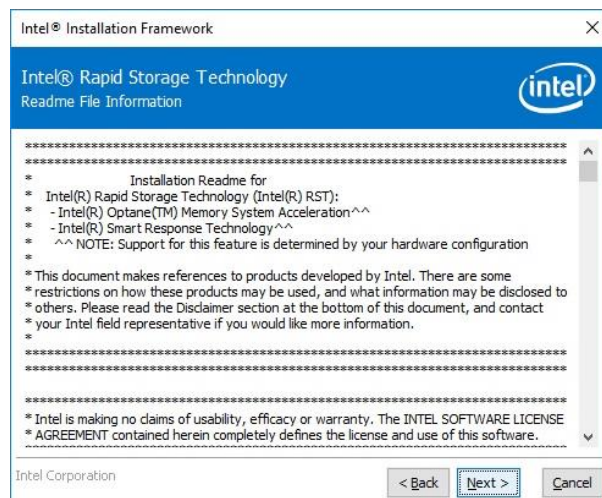


Step 3. Click Next.

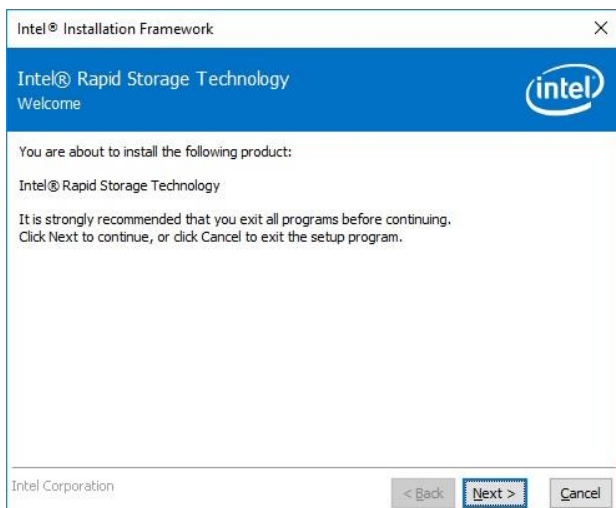


Step 1. Click Next to continue installation.

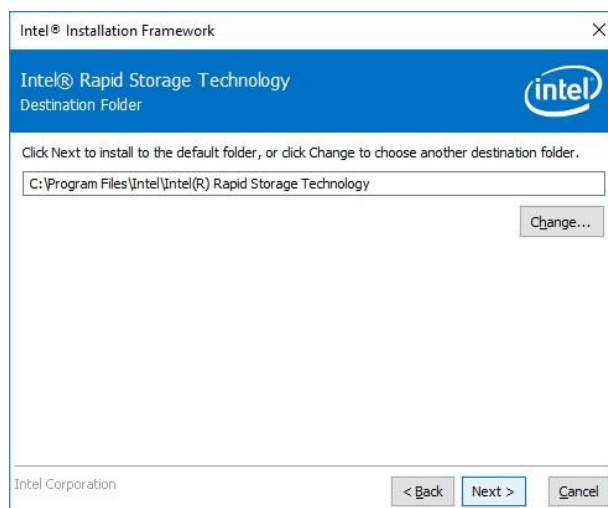


Step 4. Click Next.

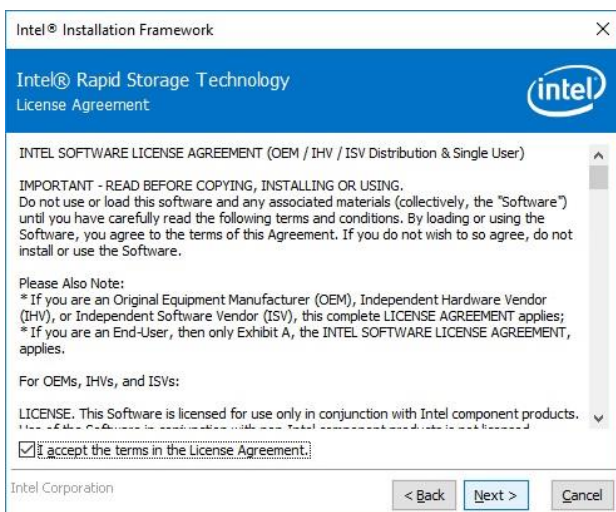

Step 2. Click Next.

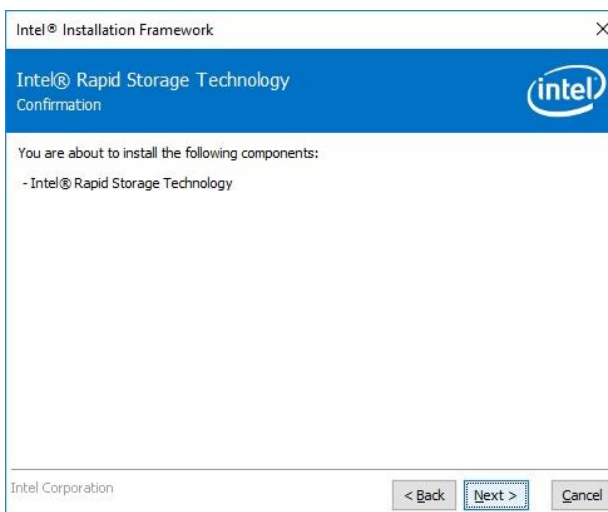


Step 5. Click Next.

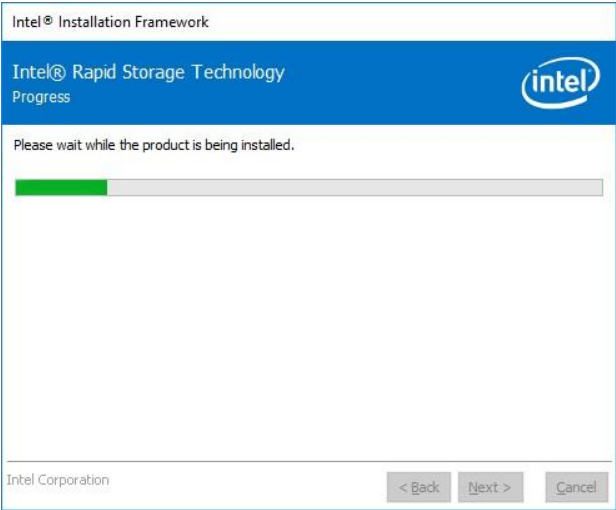

Step 6. Click Next.




Step 7. Click Install.

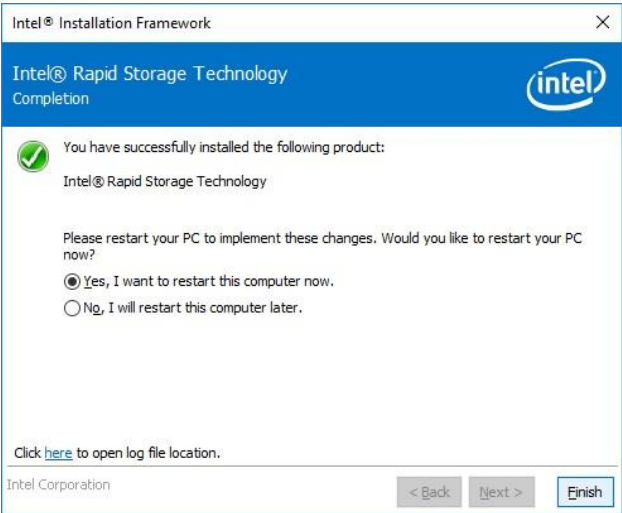


Step 8. Click Finish to complete setup.

5. Mechanical Drawing



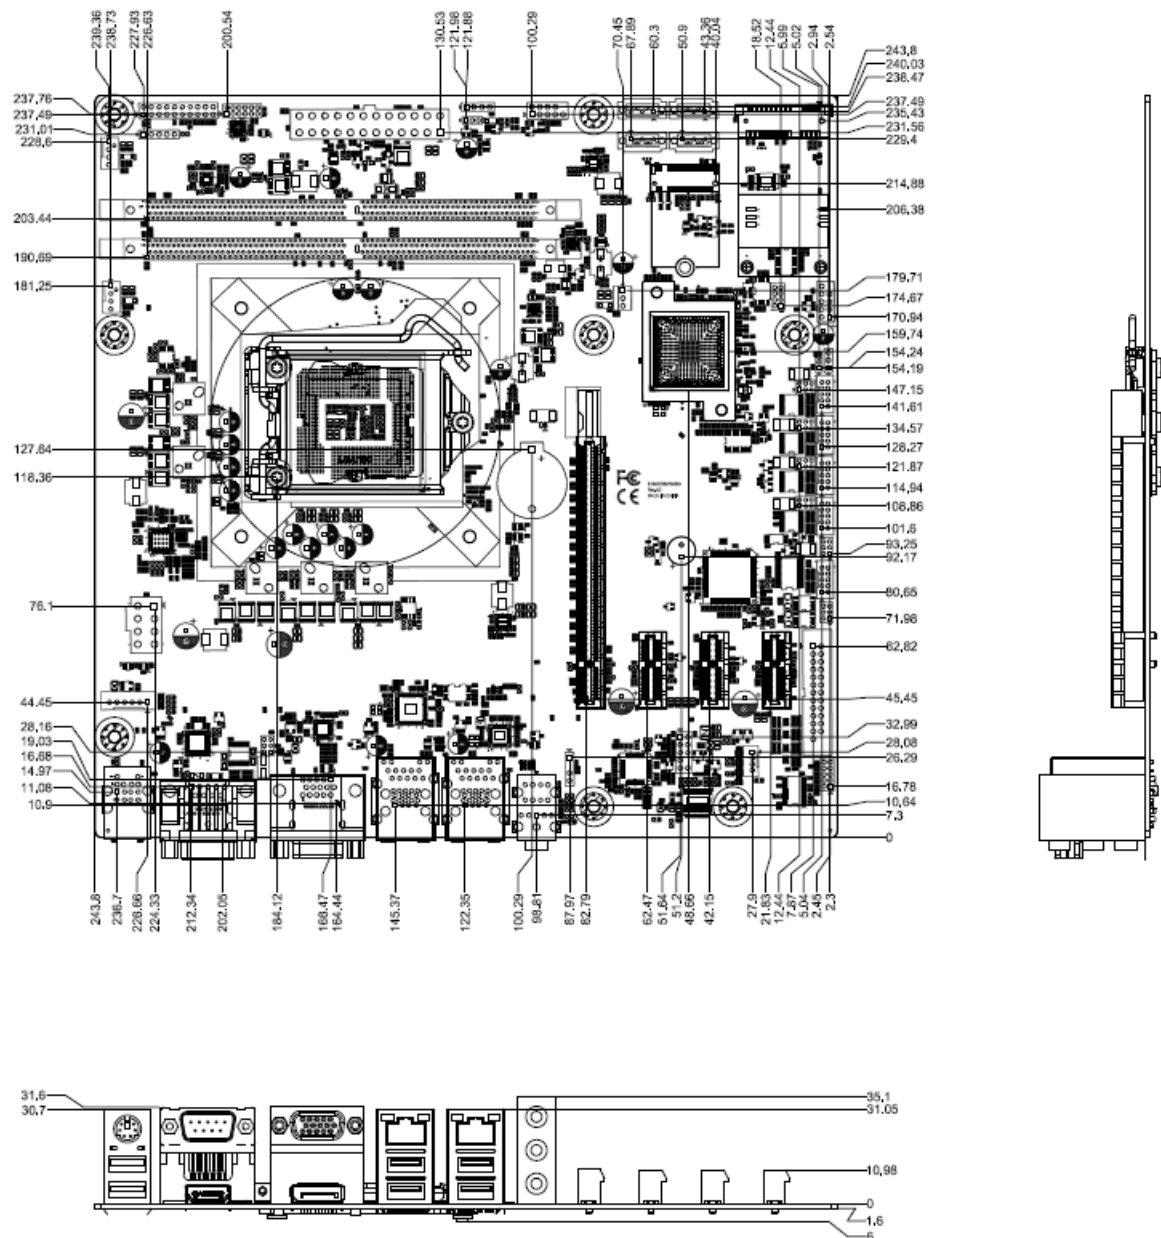

Unit: mm

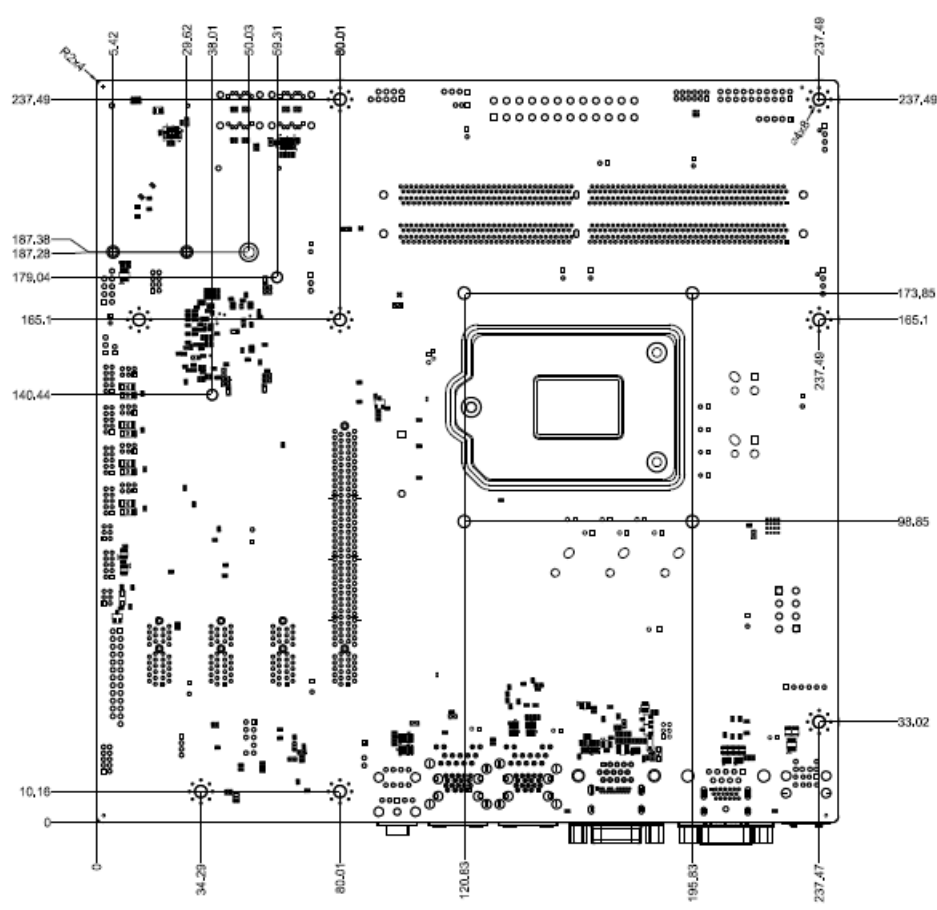

Unit: mm

